



7015 Door closer

Installation instructions:

1. Drill a hole 23mm to 25mm diameter to a depth of 152mm in the inner edge of the door at the chosen height.
2. Position the closer body into the pre-drilled hole and mark the outline of the face plate.
Remove the closer and cut a recess to allow the face plate to fit flush with the edge of the door. Fit the closer body with 4 screws provided.
3. Pull the anchor plate and chain anyway from the closer body and hold by EITHER (a) pushing retaining clip over chain OR (b) pushing retaining pin through the chain as close to the face plate as possible.
4. Mark the outline of the anchor plate on the door frame, cut a recess to allow the plate to fit flush with edge of the frame.
The anchor plate can now be fitted to the door frame with 4 screws provided.
5. Open the door and remove the retainer.
6. To adjust the closer (i) open the door and replace the retainer, (ii) remove the anchor plate from the frame and (iii) turn the anchor plate clockwise or anticlockwise to increase or decrease spring tension. DO NOT OVERTIGHTEN.

Note:

This product should only be used individually on doors weighing 50 kg or less.

This product is not suitable for heavy doors, those fitted with rising hinges or conditions where air displacement is limited.

A stop should always be fitted to prevent the door opening beyond the limits of the closer.

The set includes:

- door closer
- steel woodscrews
- retainer for use during fitting