


3 in 1

UNIVERSAL SYSTEM



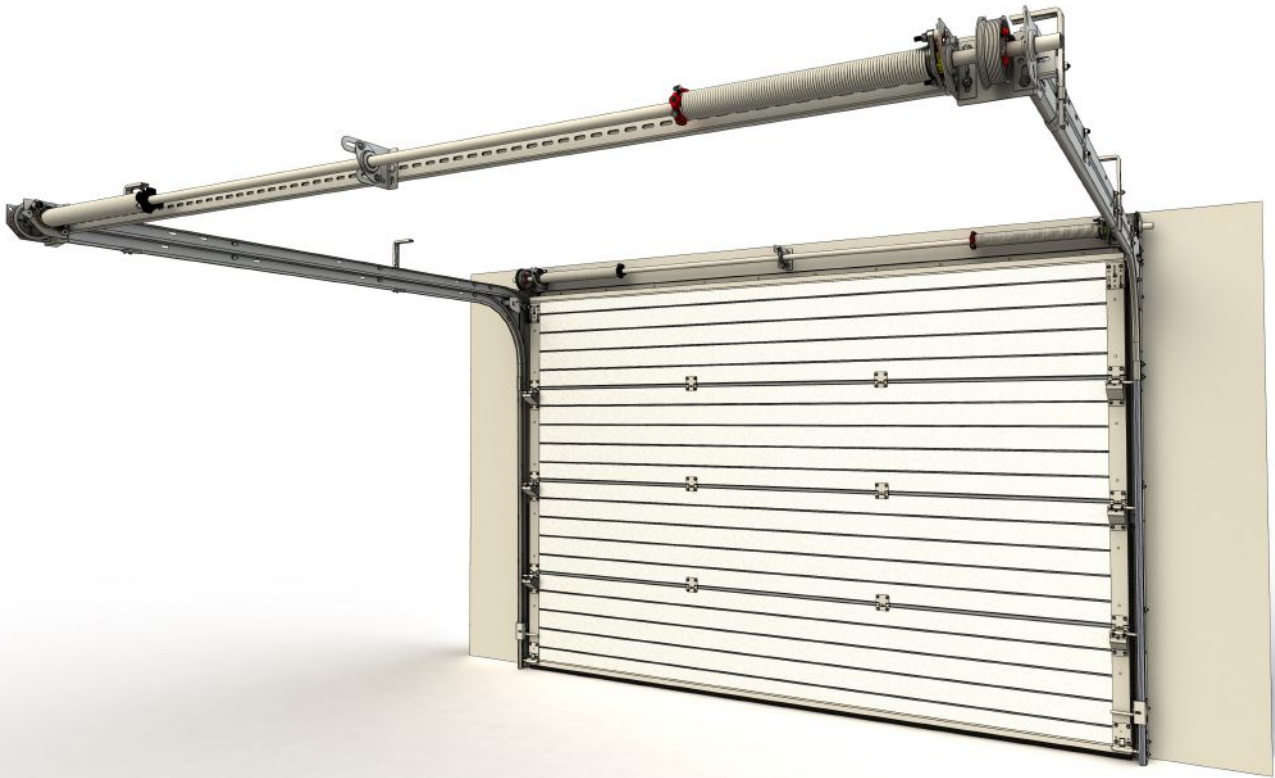


TORSION SPRINGS FRONT UNI-F

TORSION SPRINGS REAR UNI-R

TENSION SPRINGS UNI-X

TENSION SPRINGS PRE-TENSION

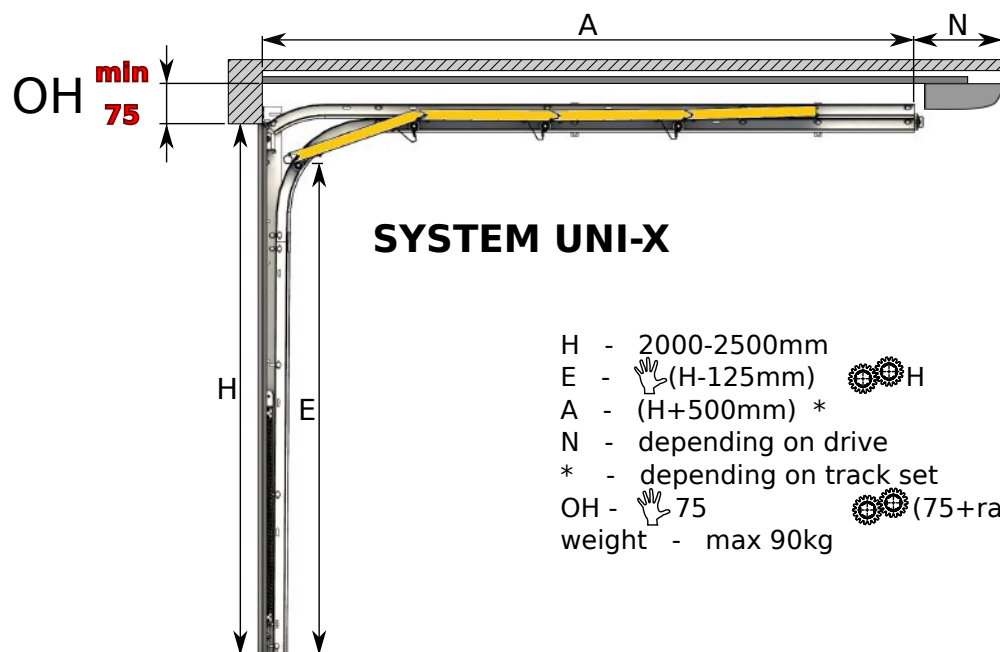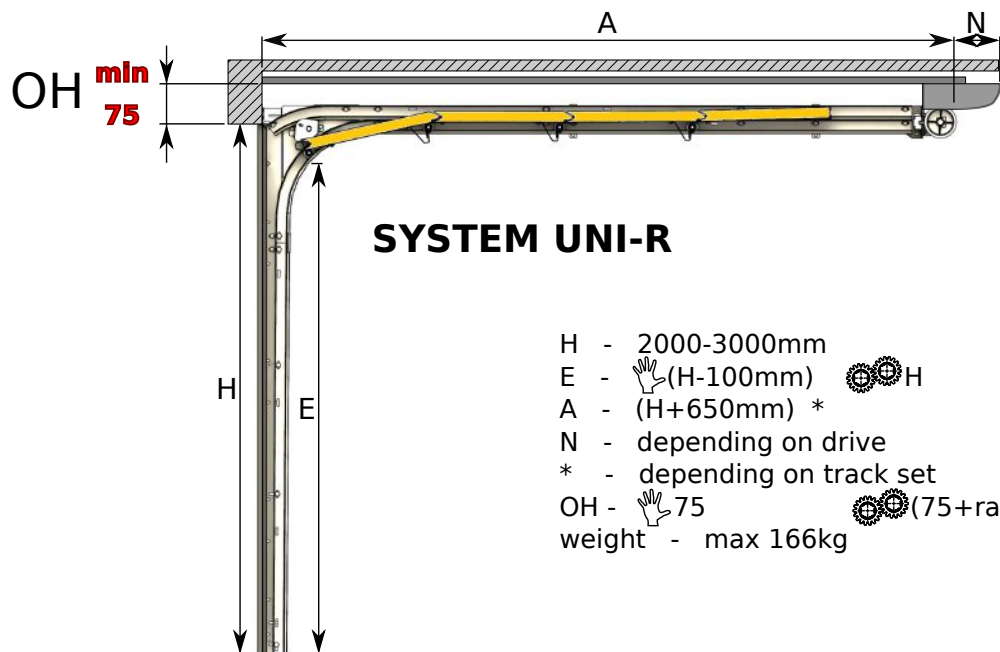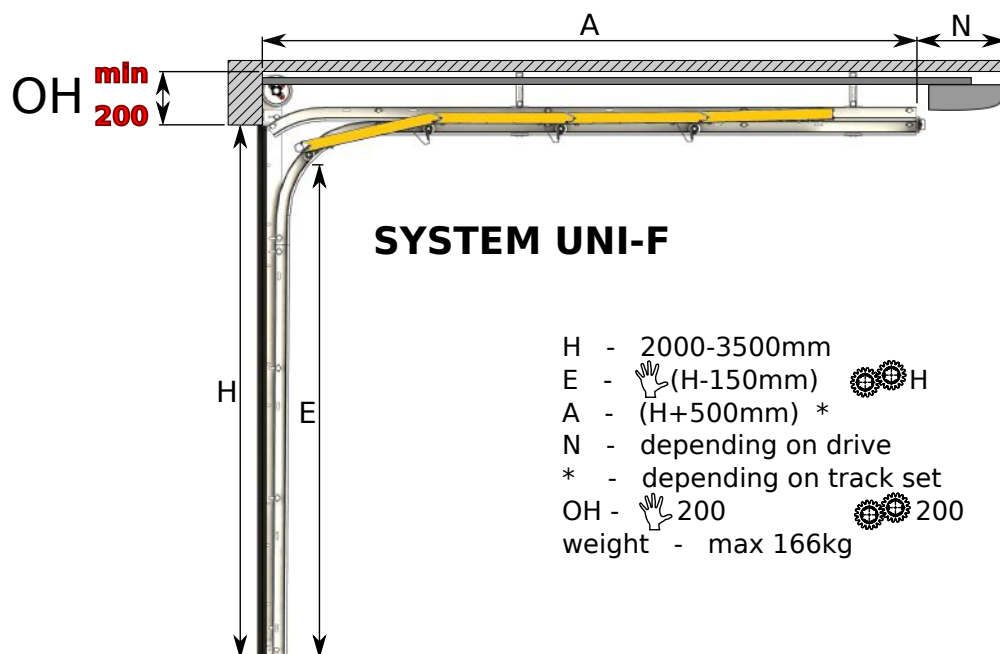

UNI-F



1-48,96-119

UNI-R








1-24,49-76,96-119


UNI-X



1-24,77-95,96-119

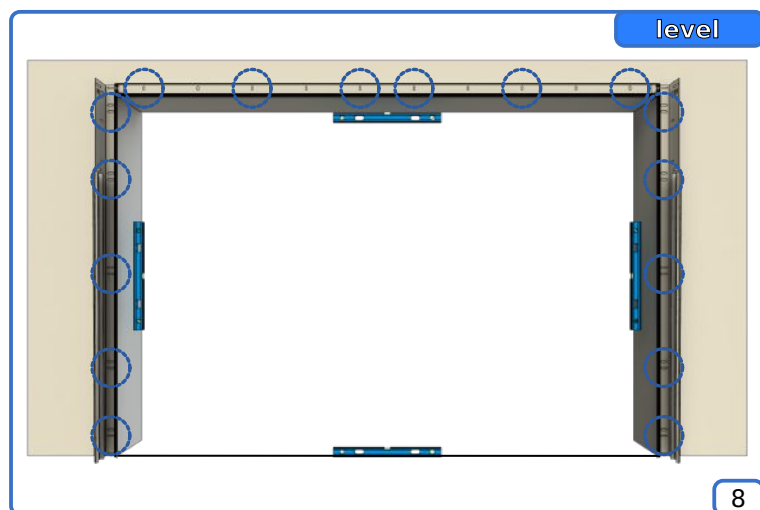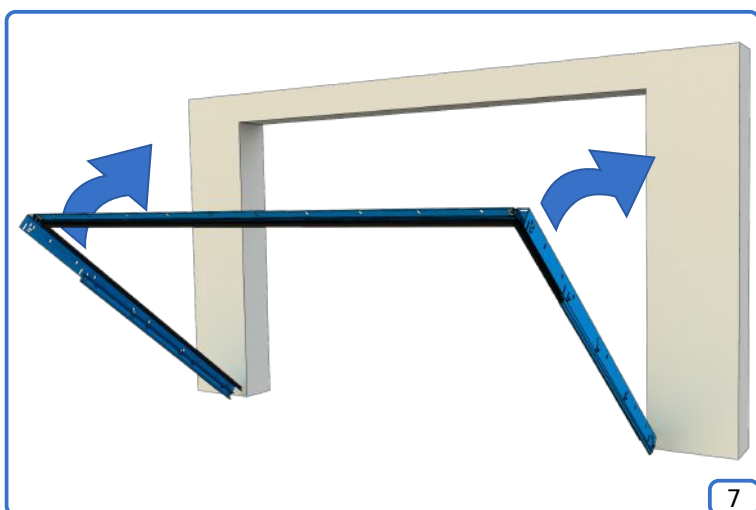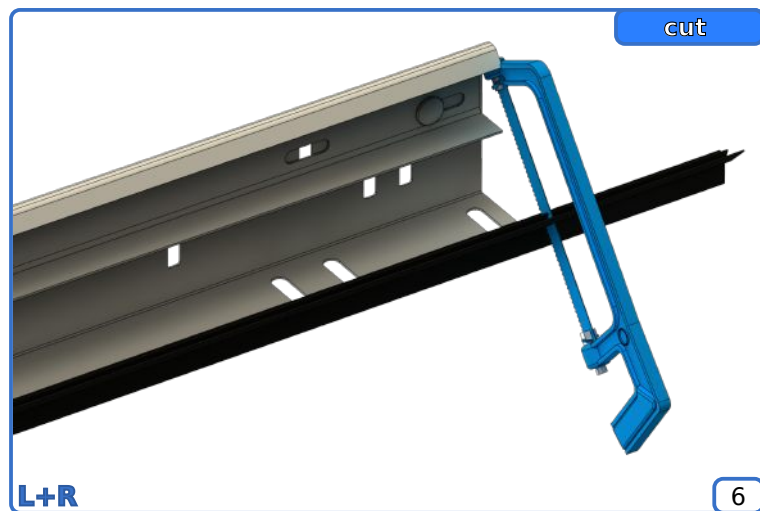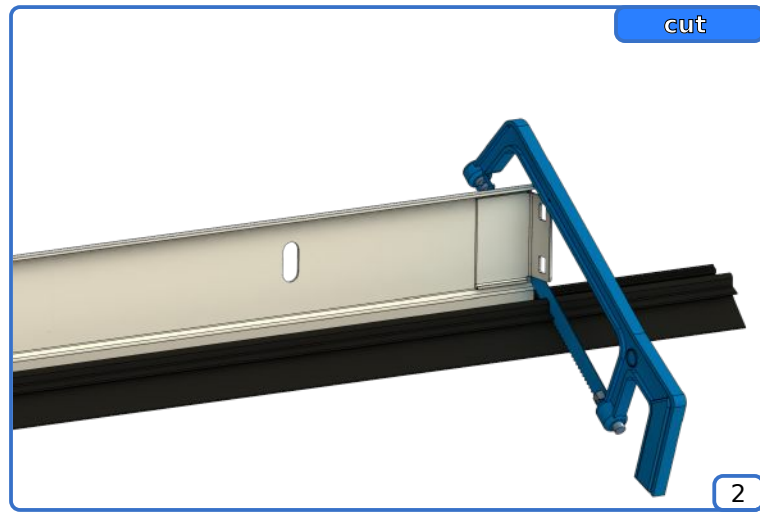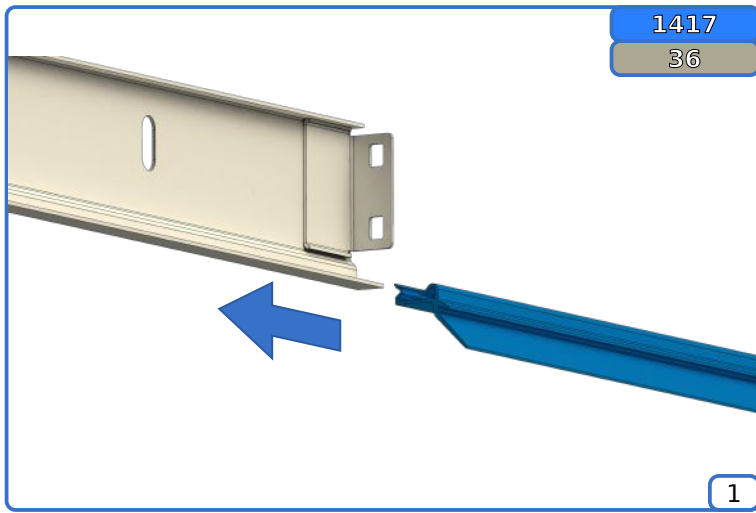


drill

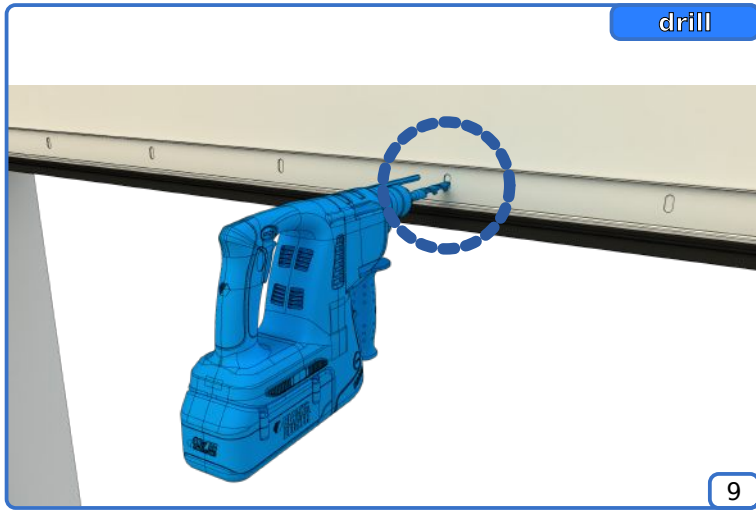


9

peg

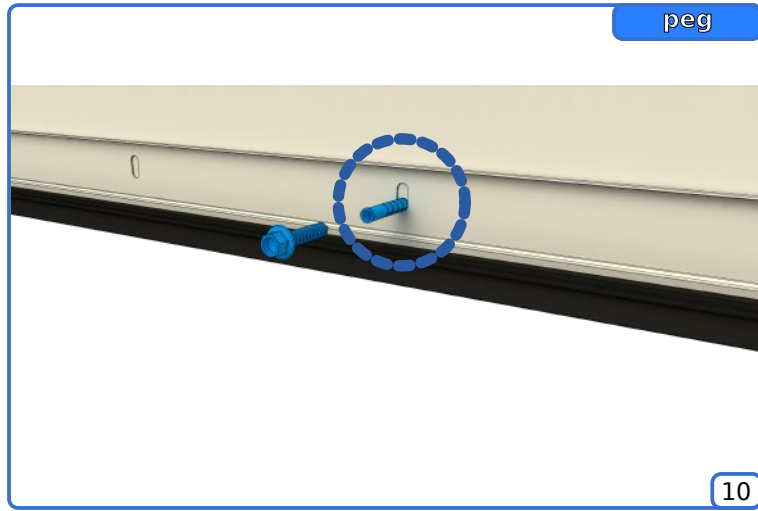


10

RSNRK HBS
5630400

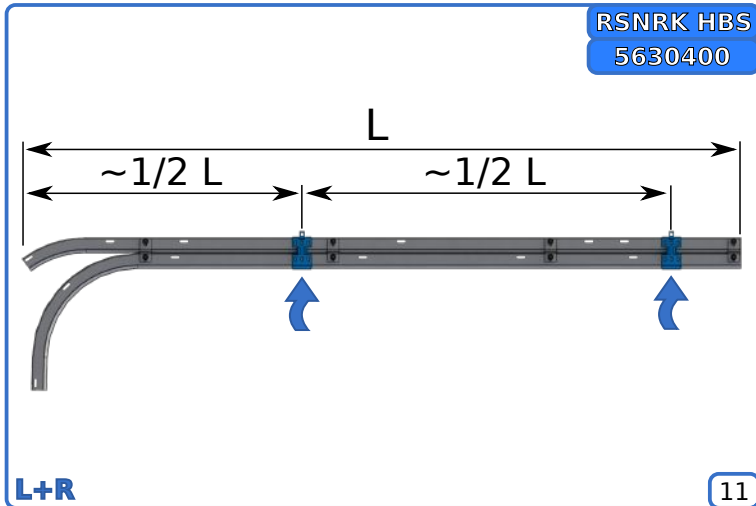


11

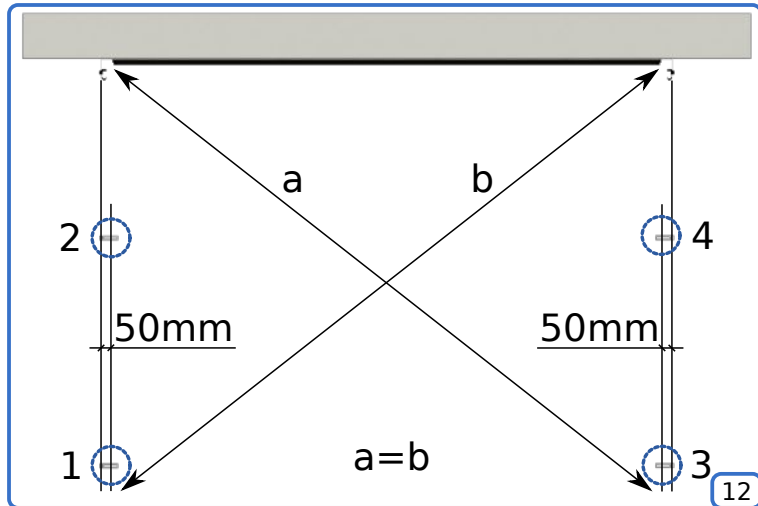


12

5630180
drill

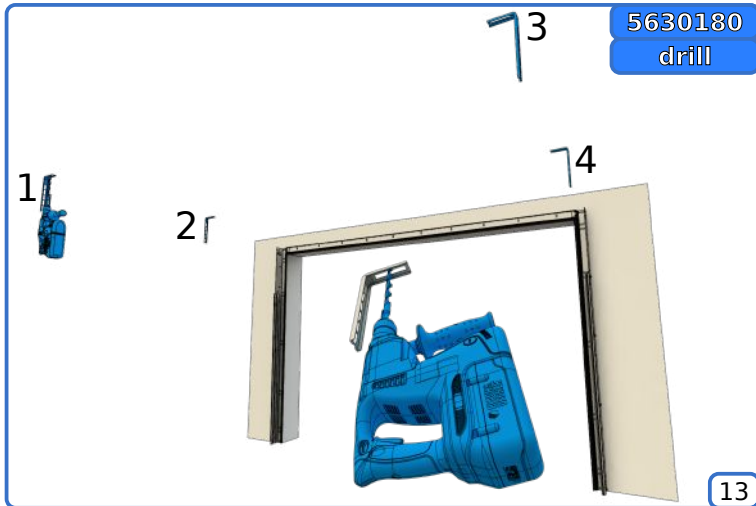


13

peg

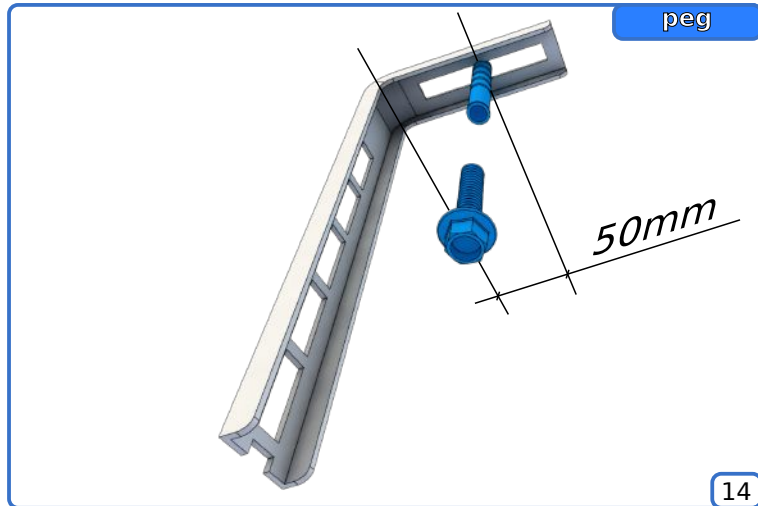


14





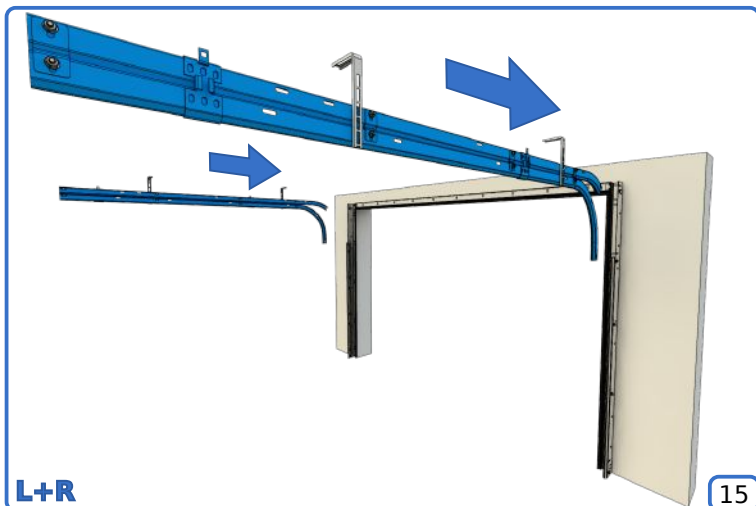


15






level
61816P
M8 6180

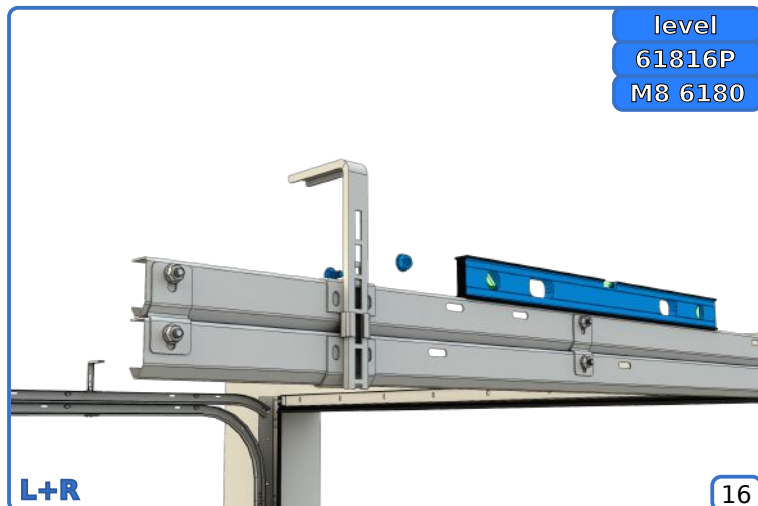








16

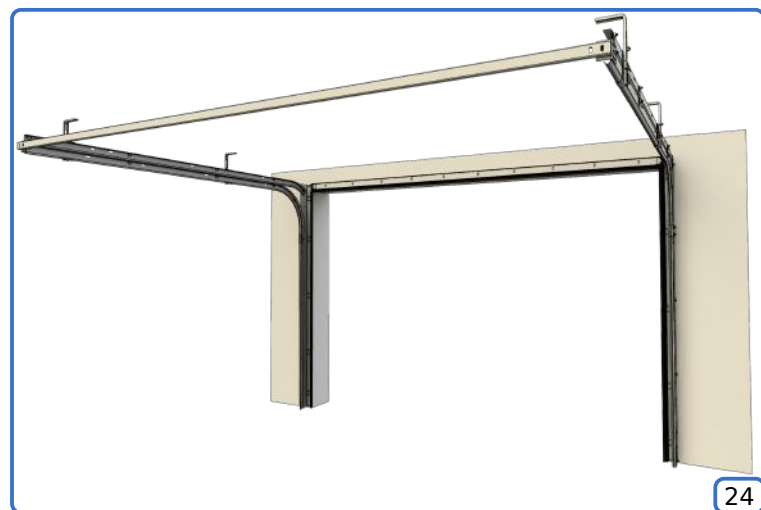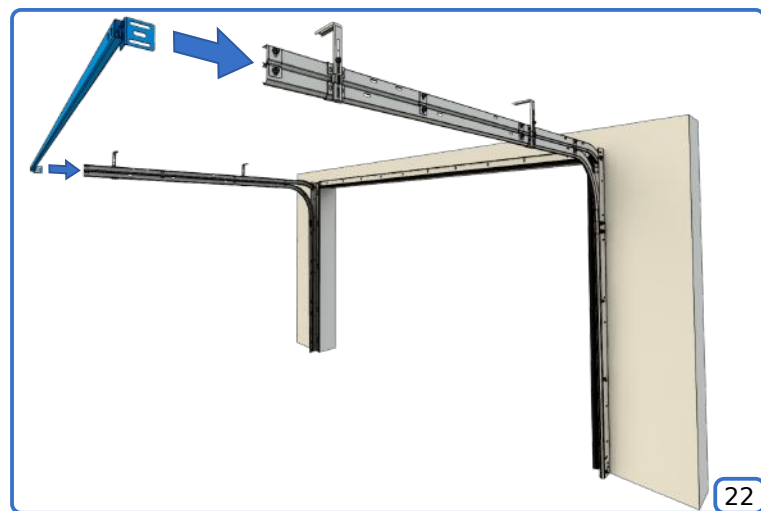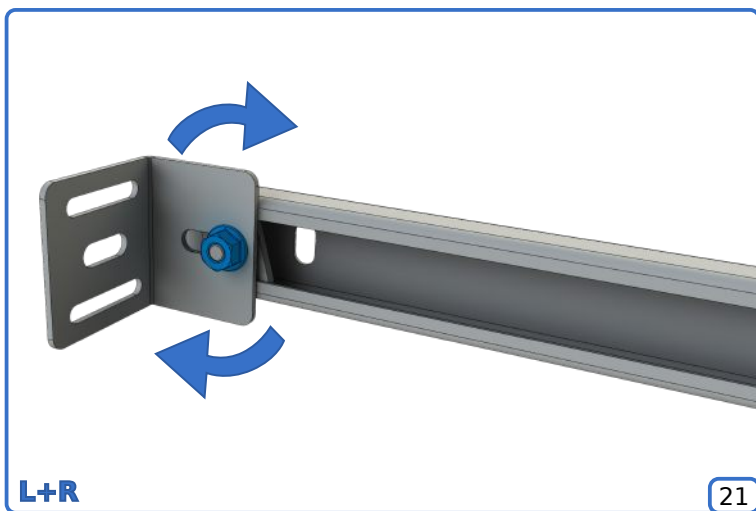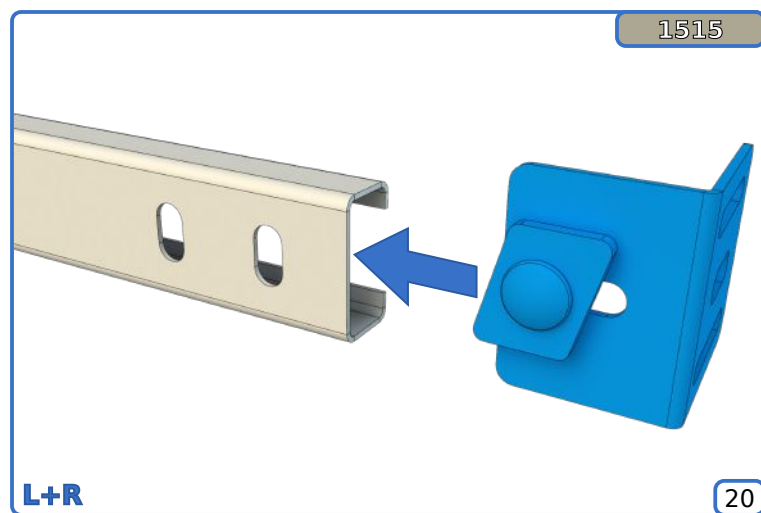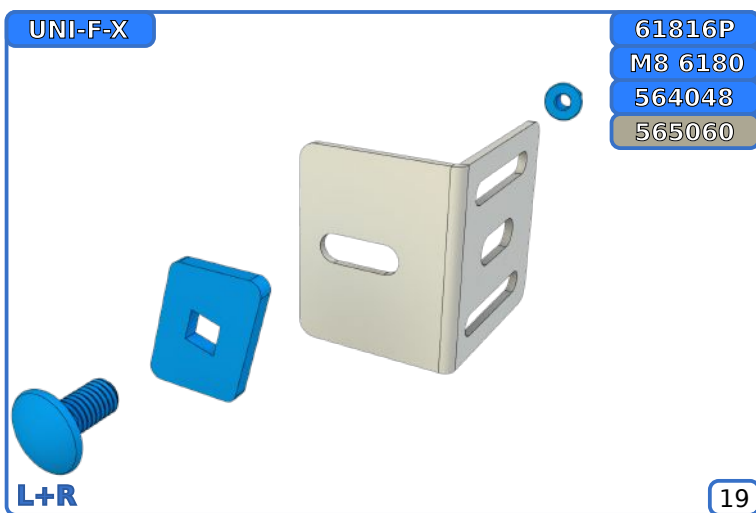








UNI-F

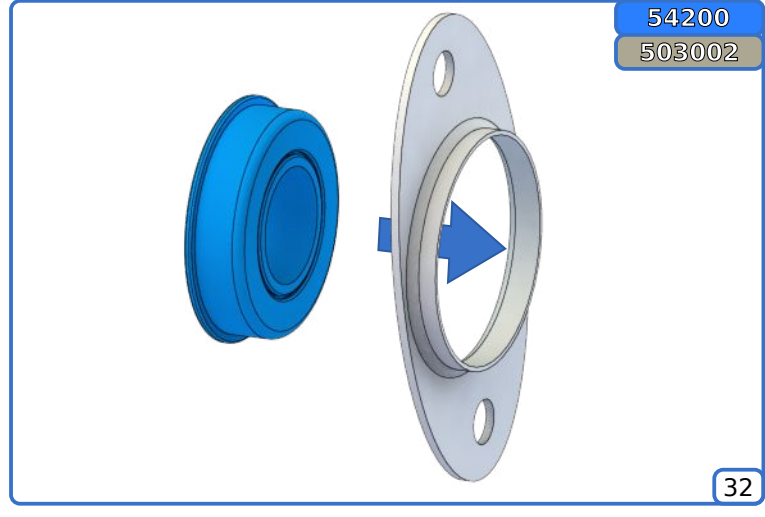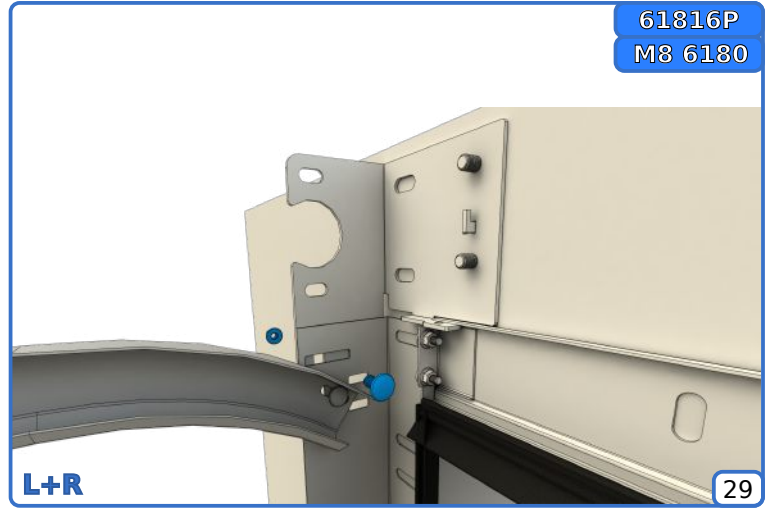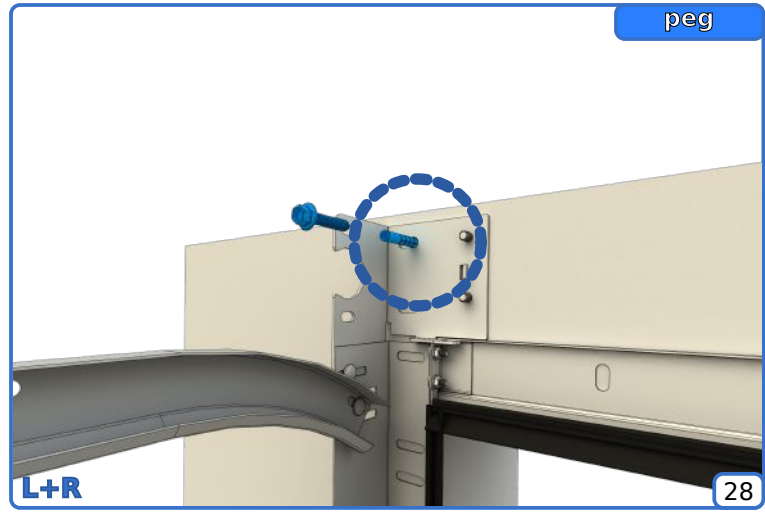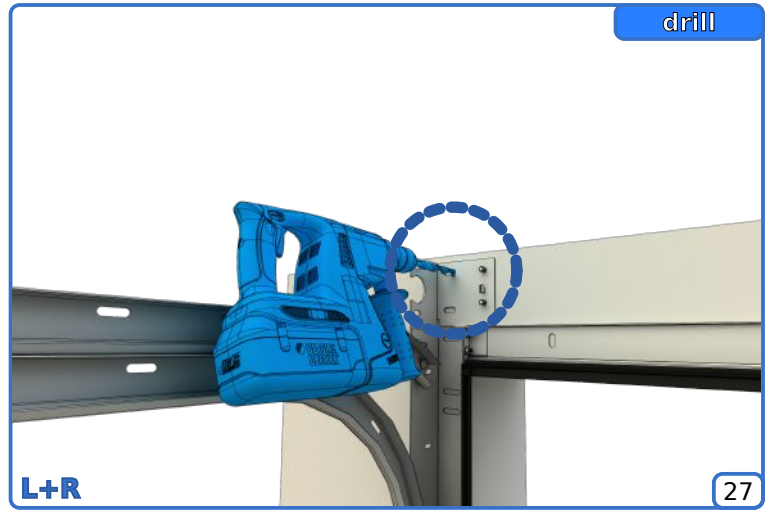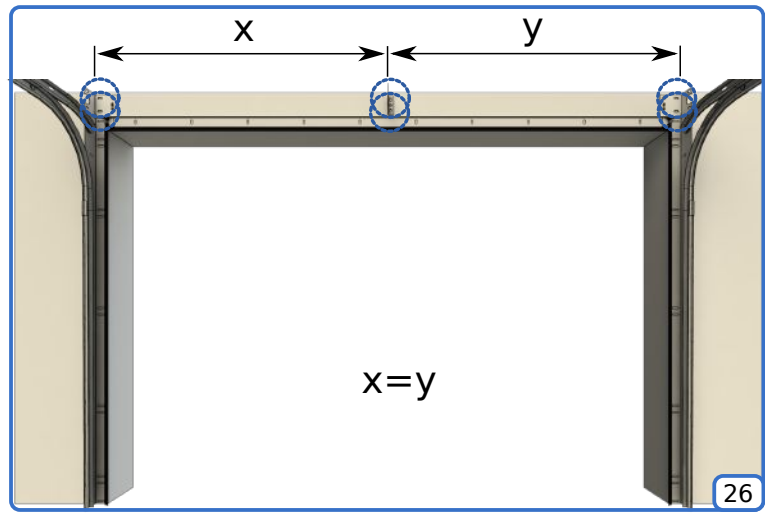








UNI-F

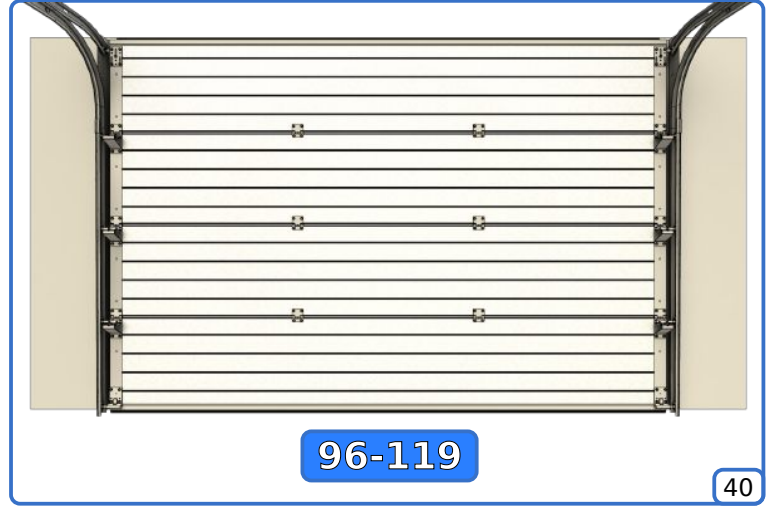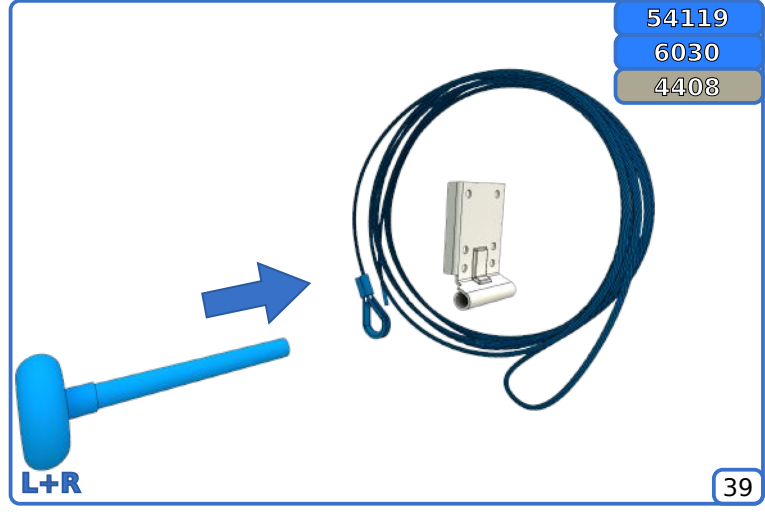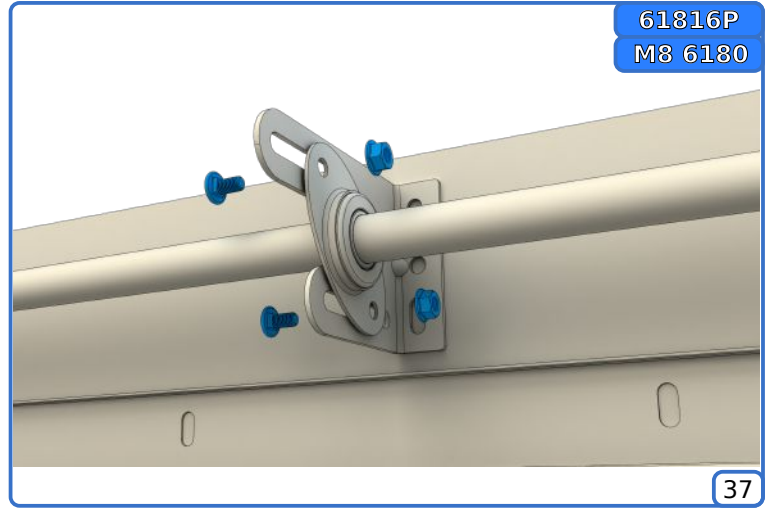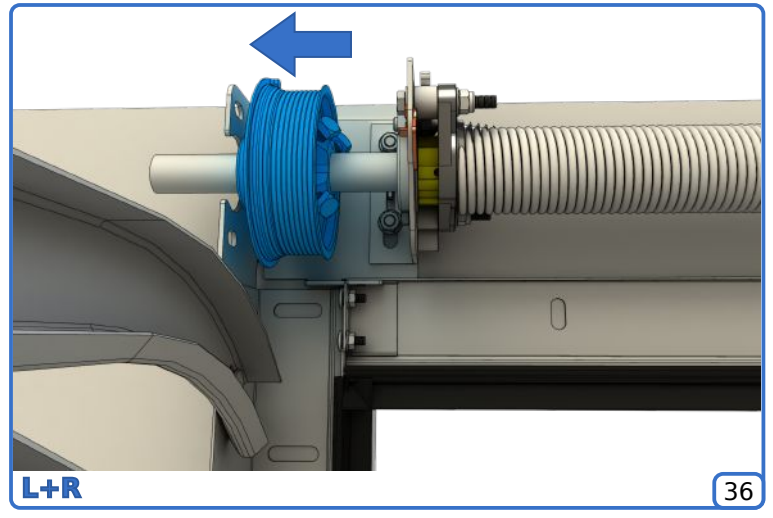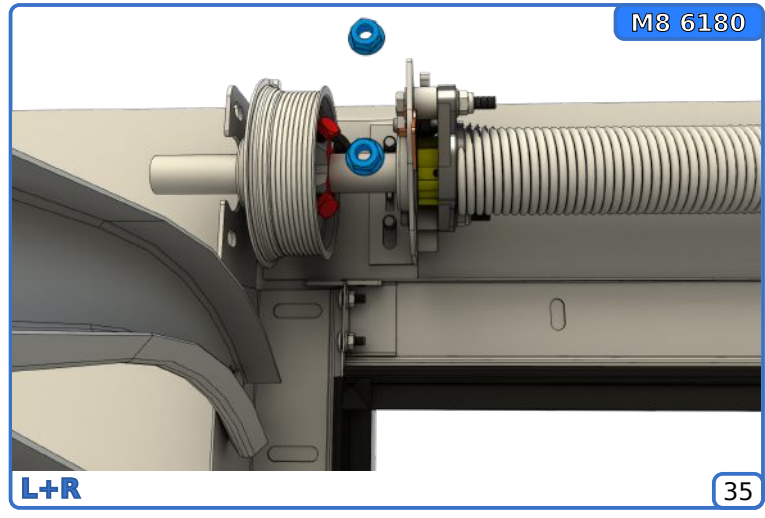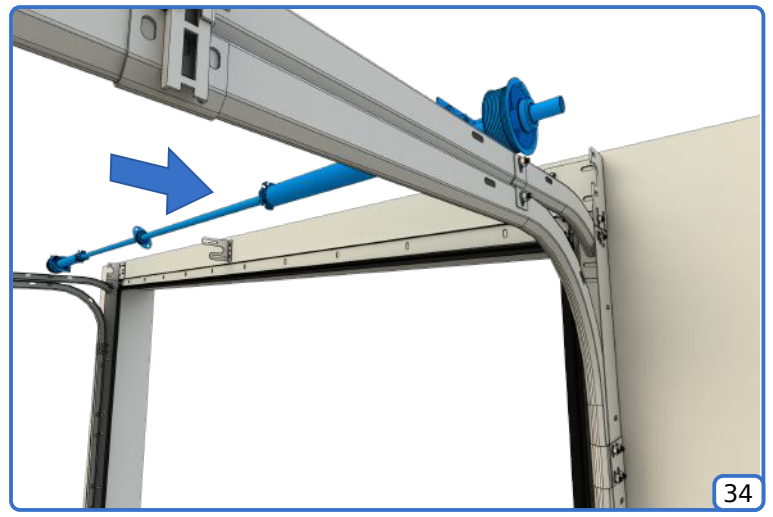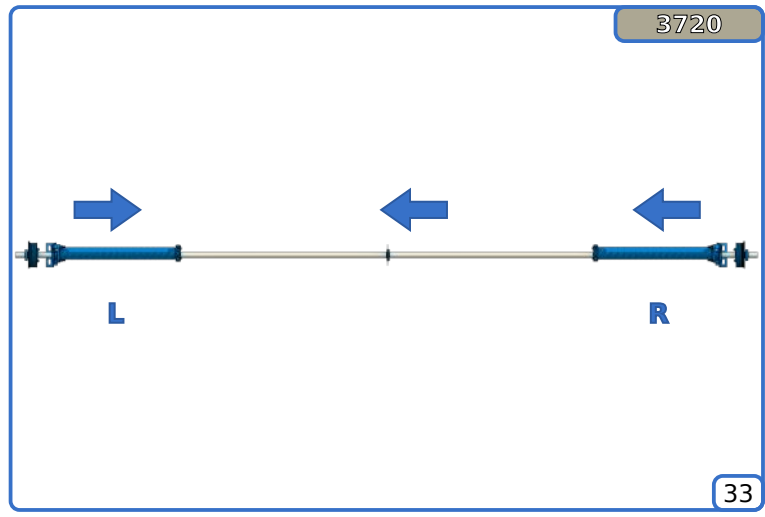






UNI-F

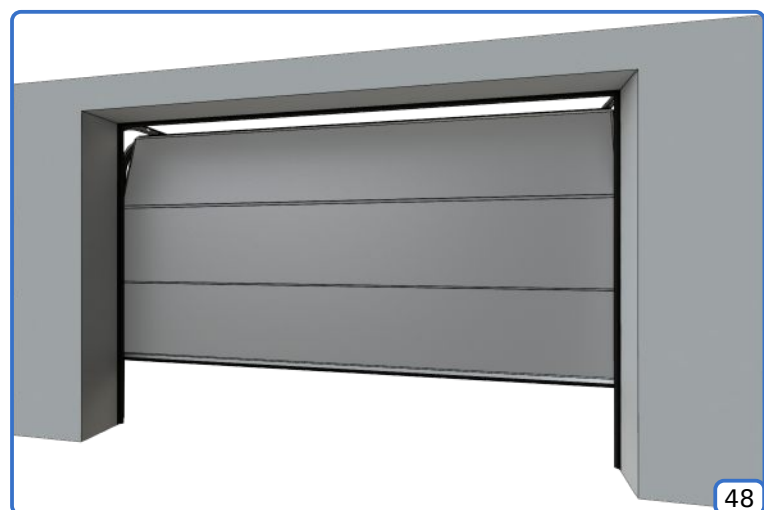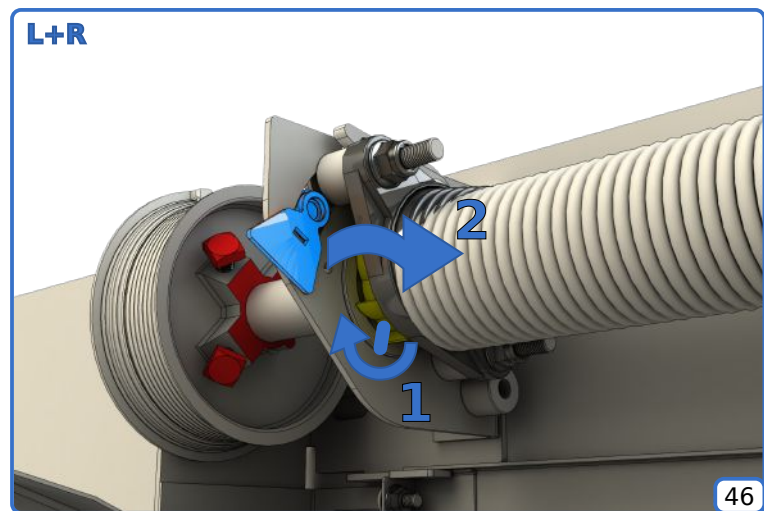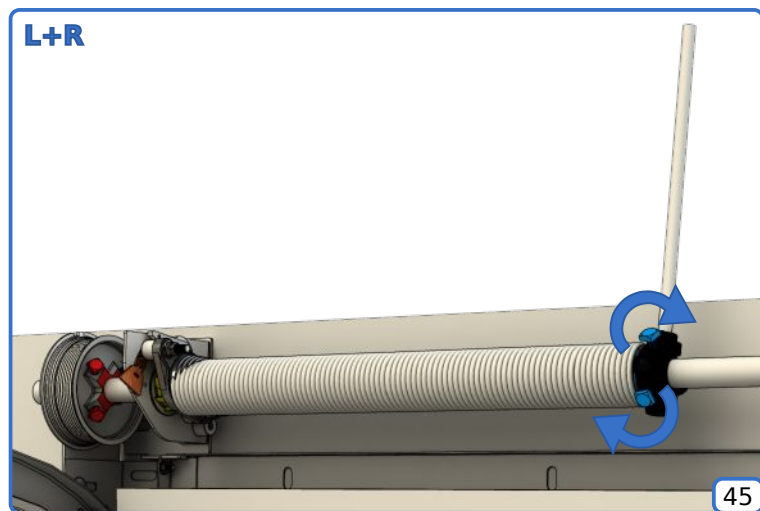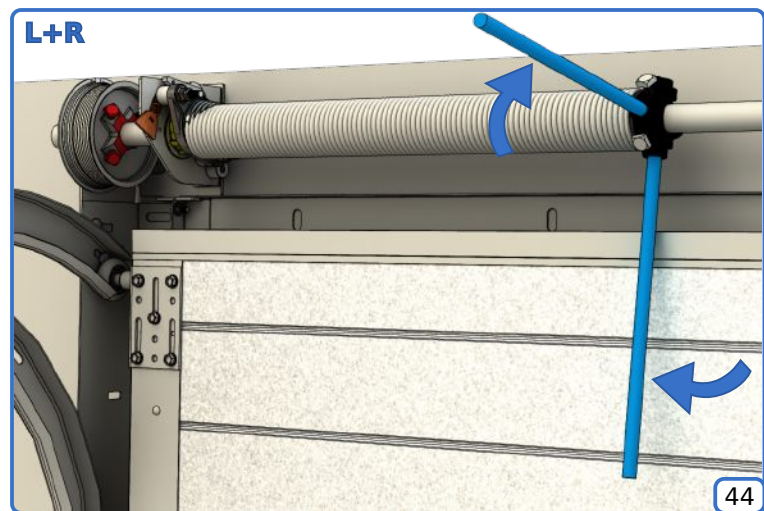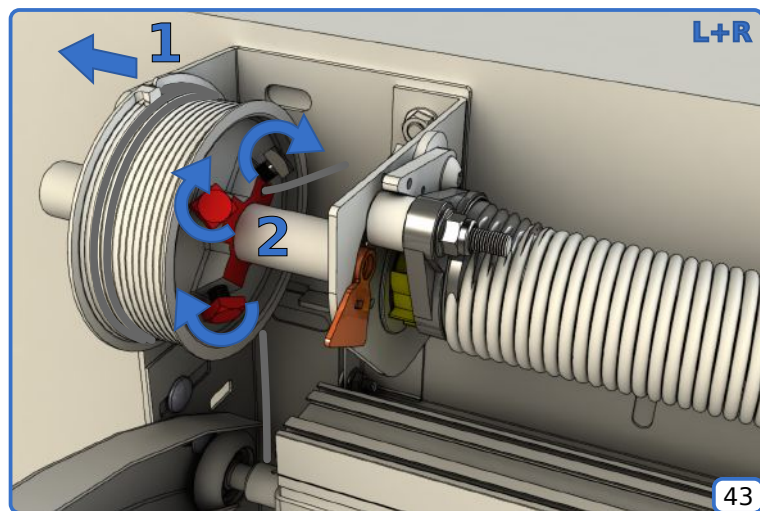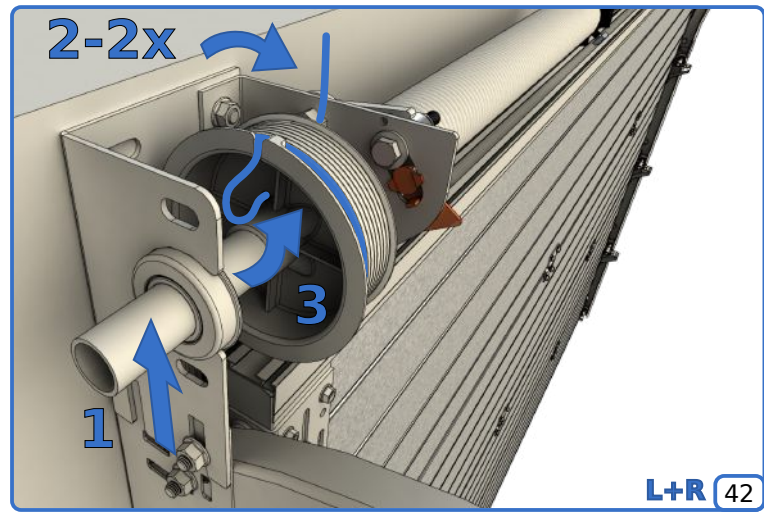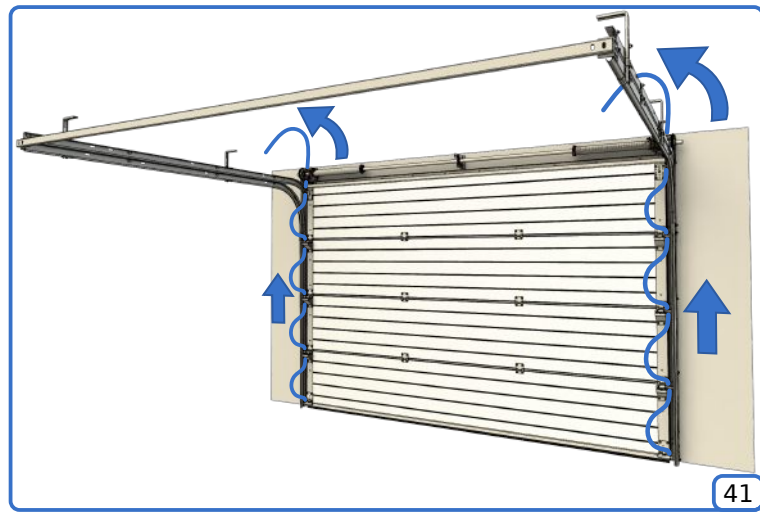








UNI-R

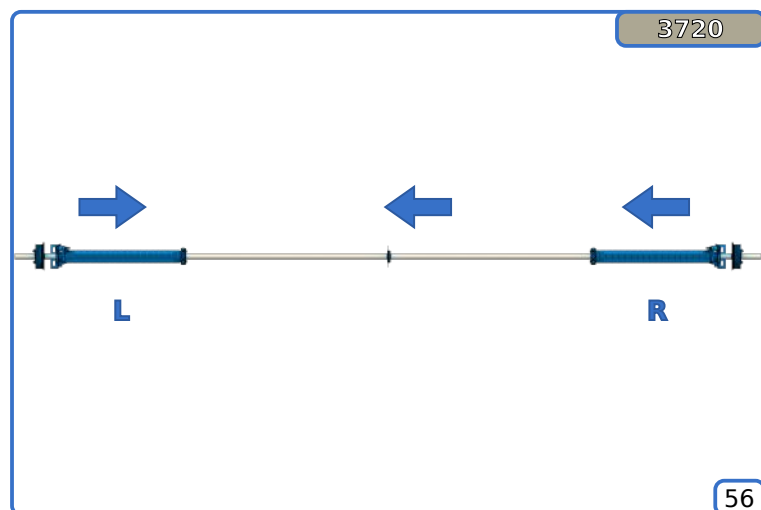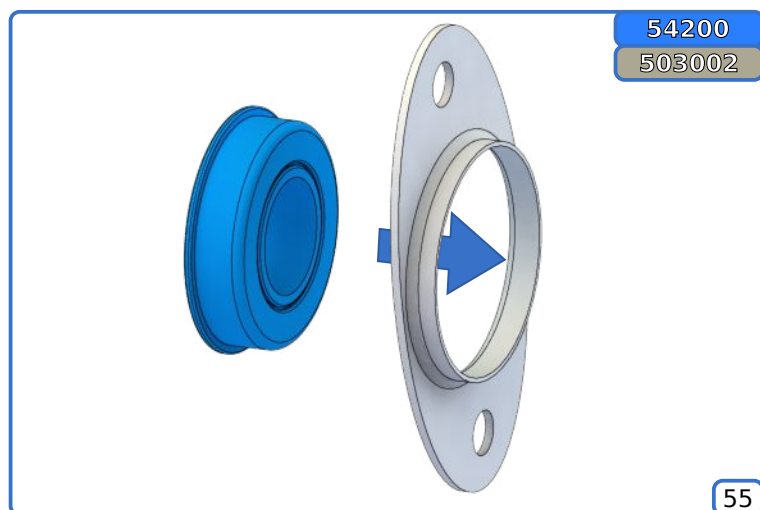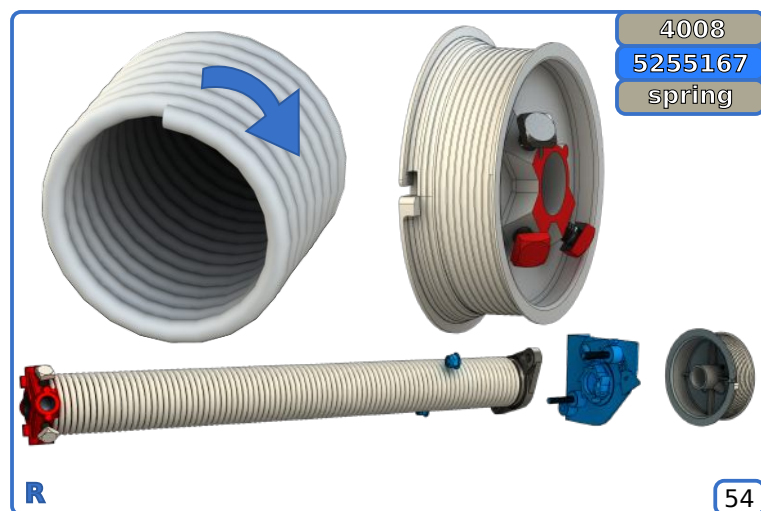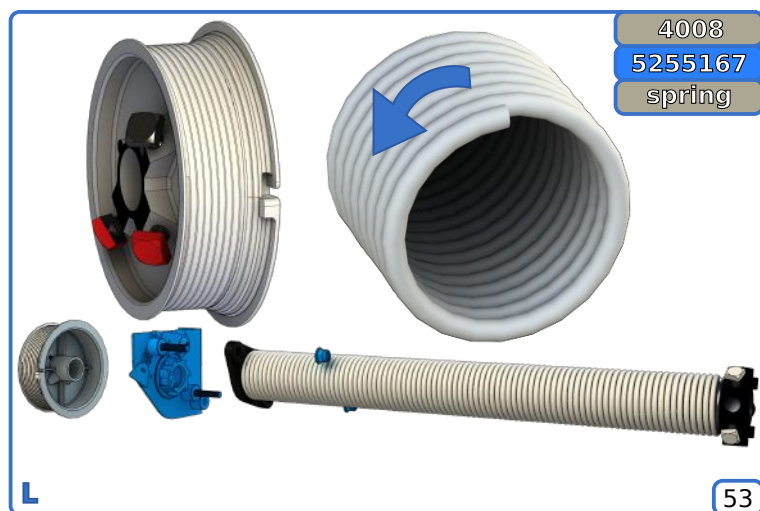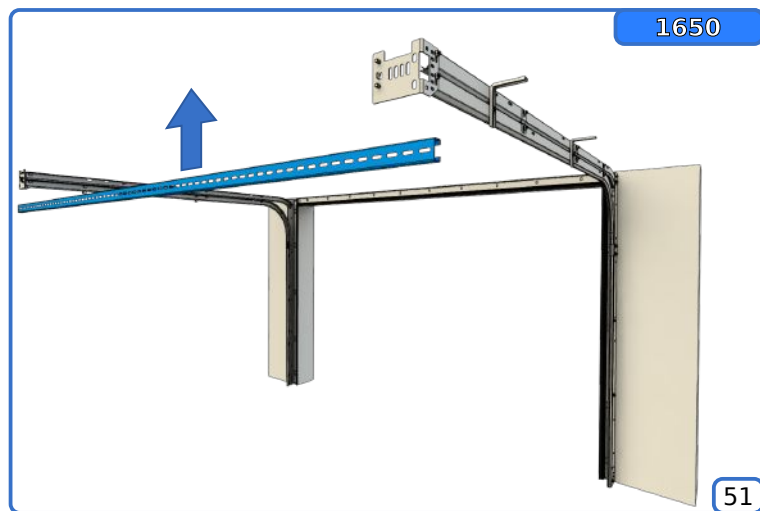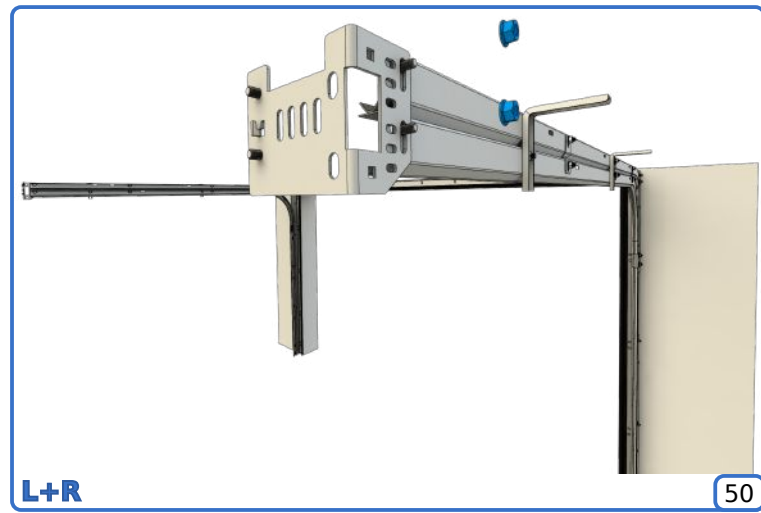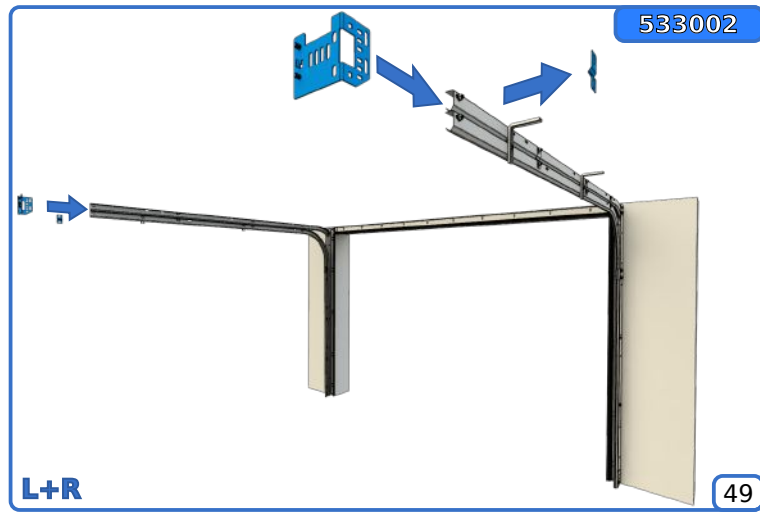



UNI-R

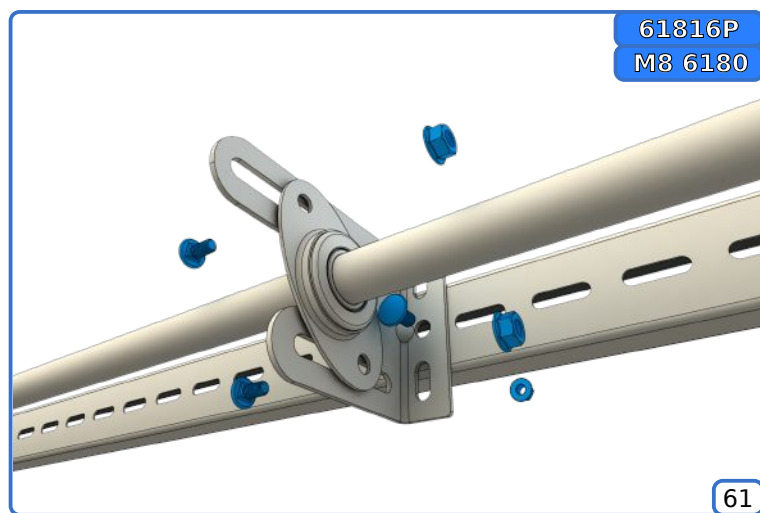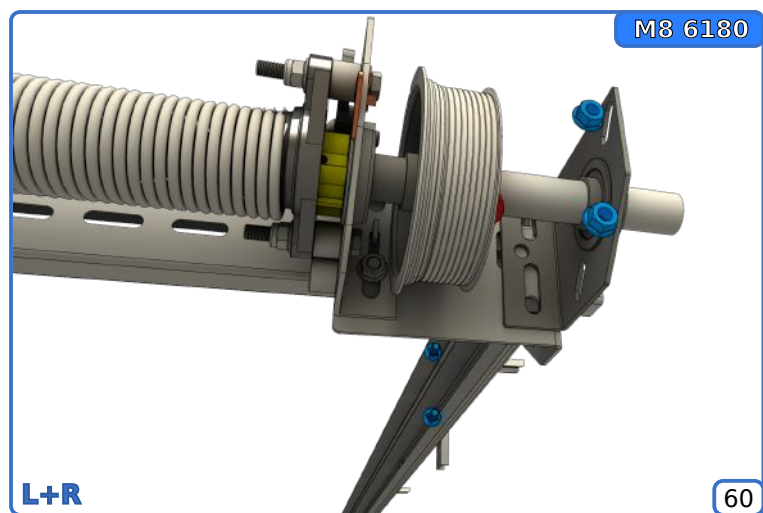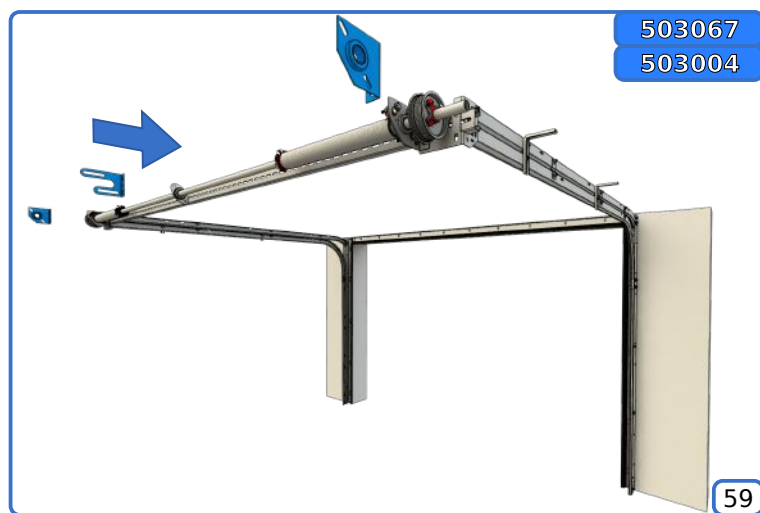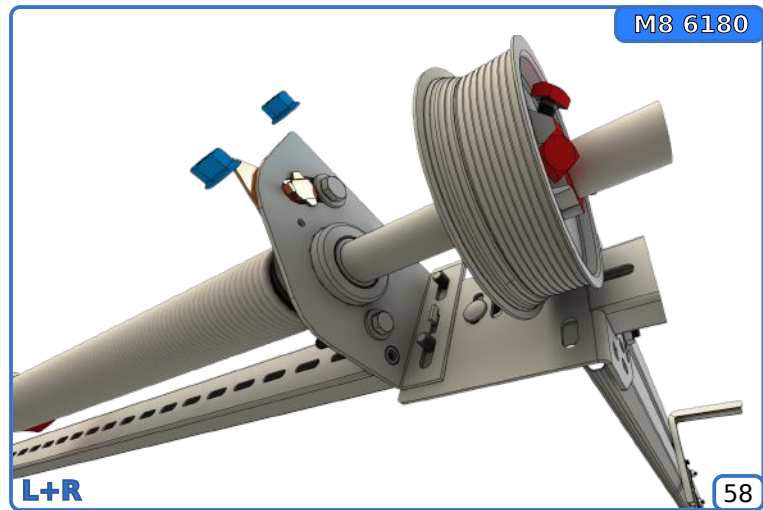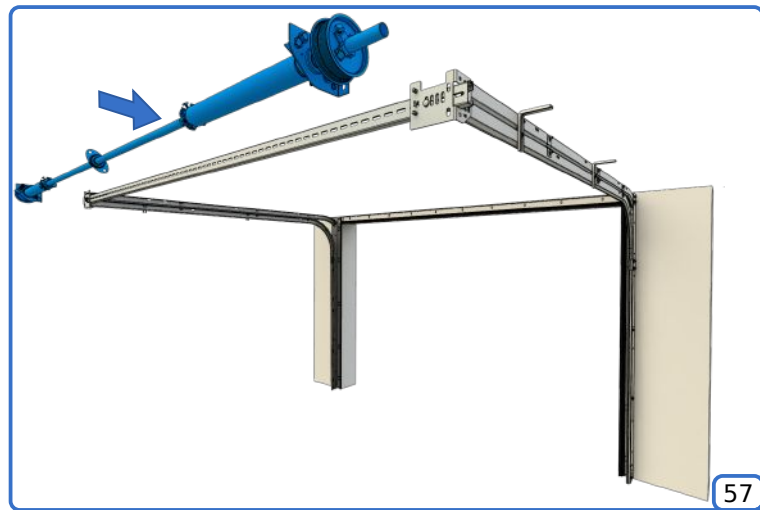




UNI-R

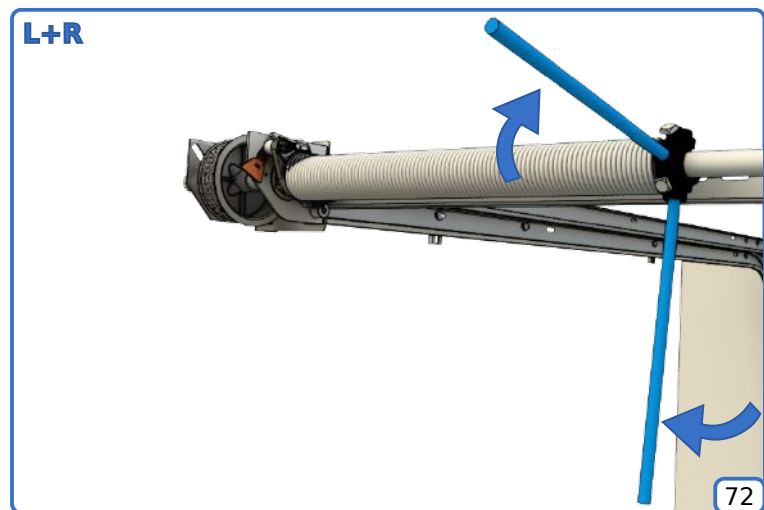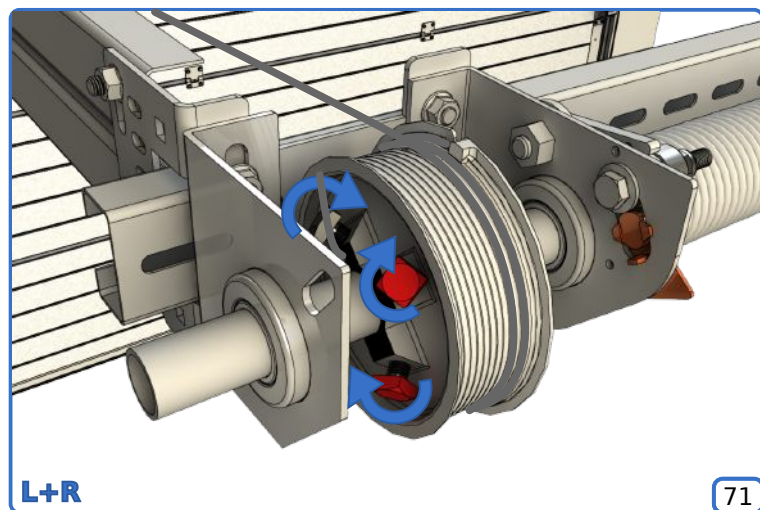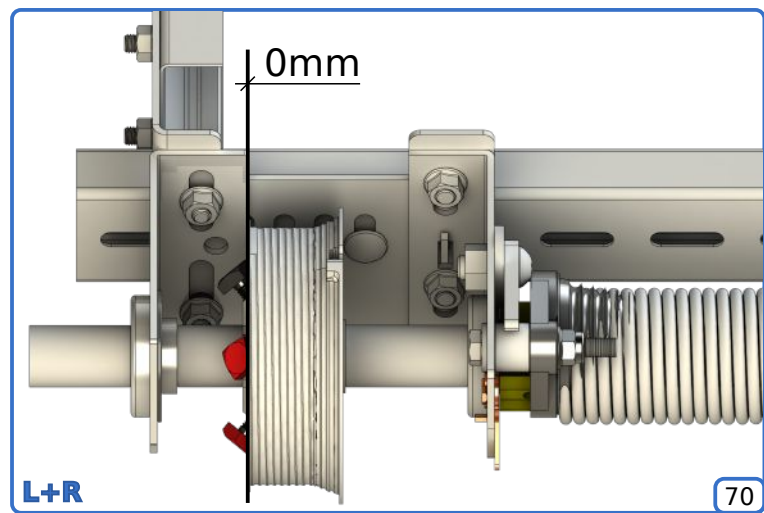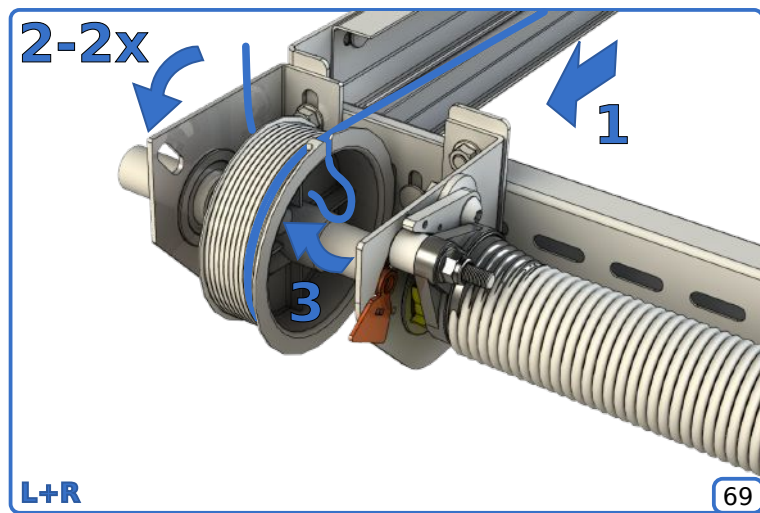
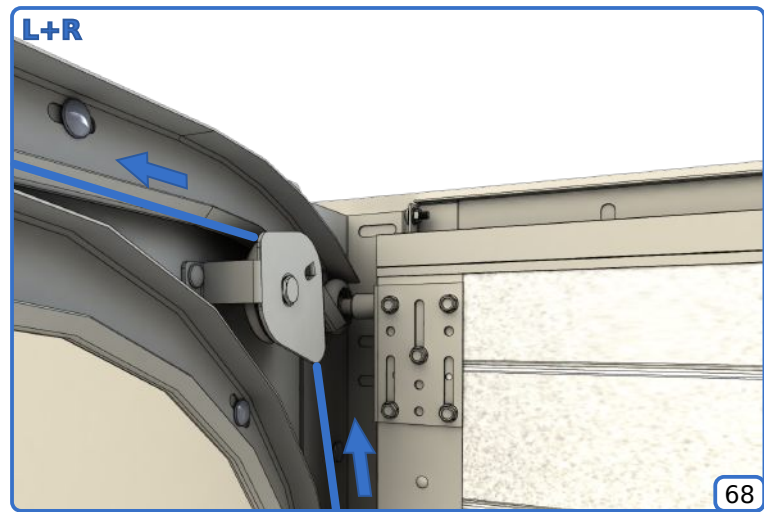
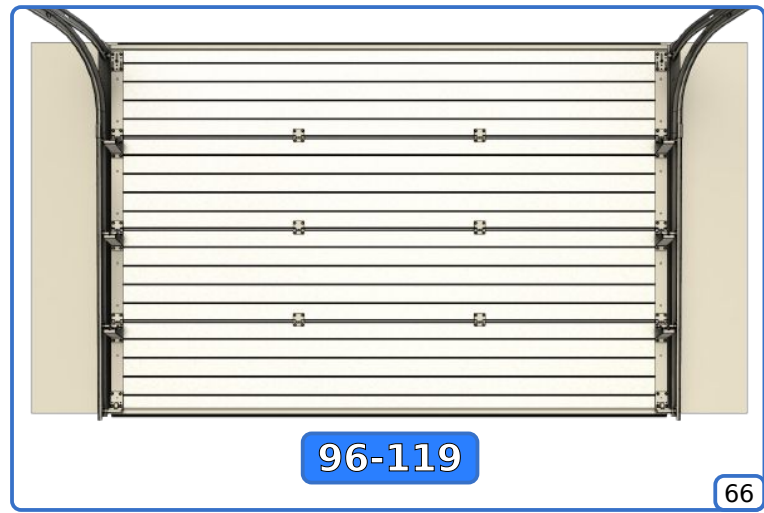
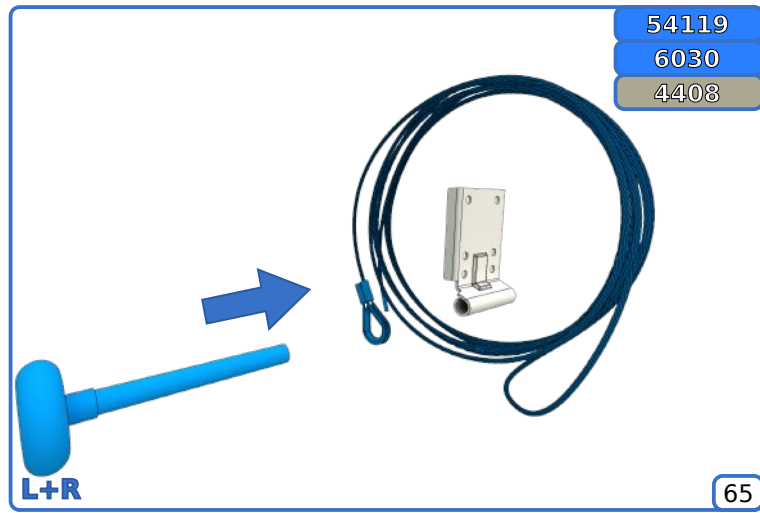








UNI-R

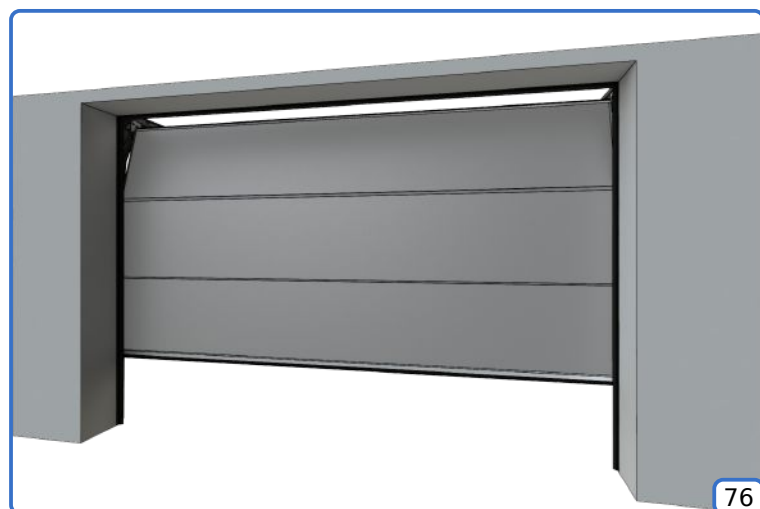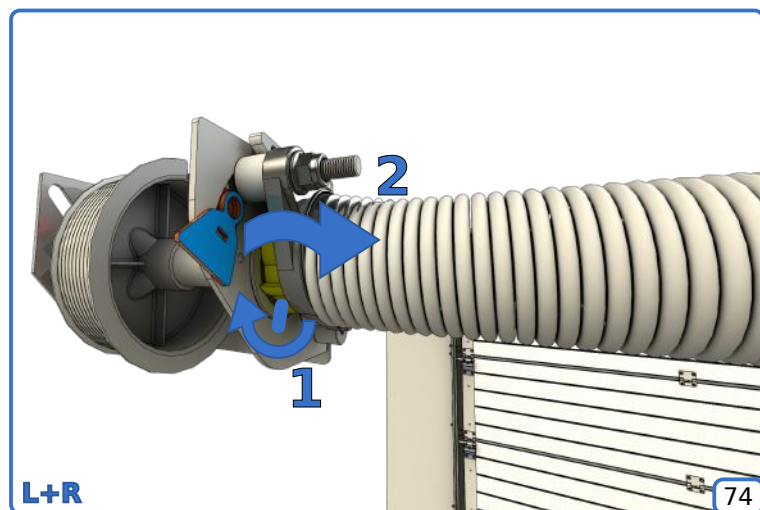








UNI-X

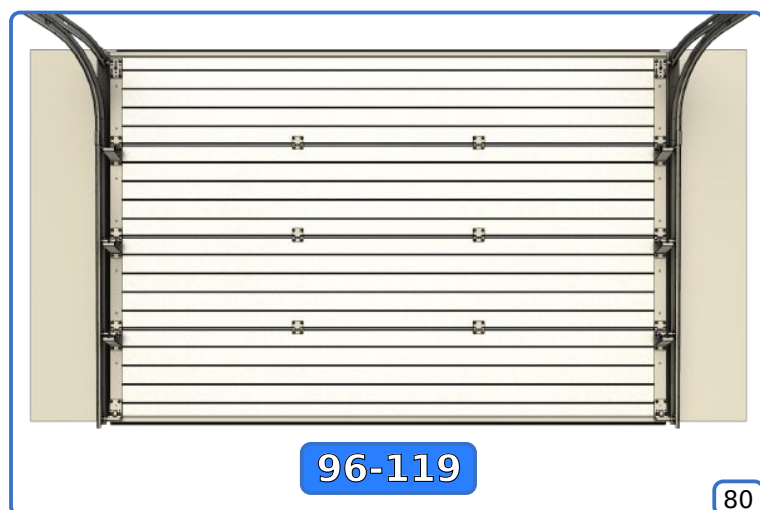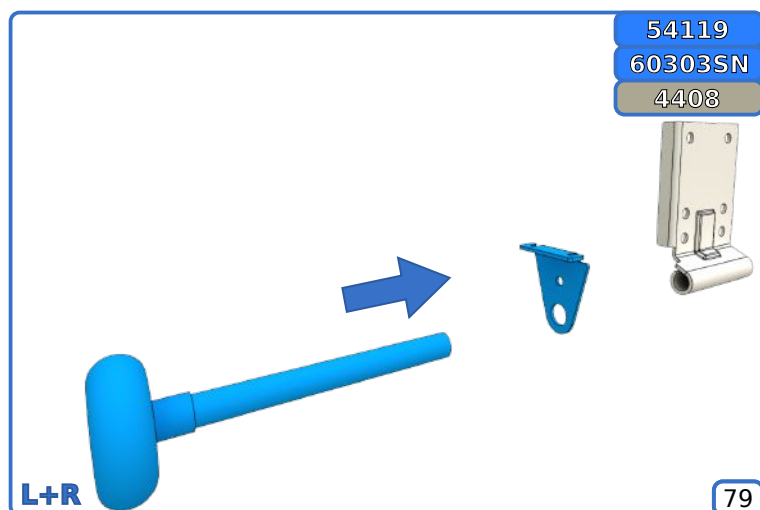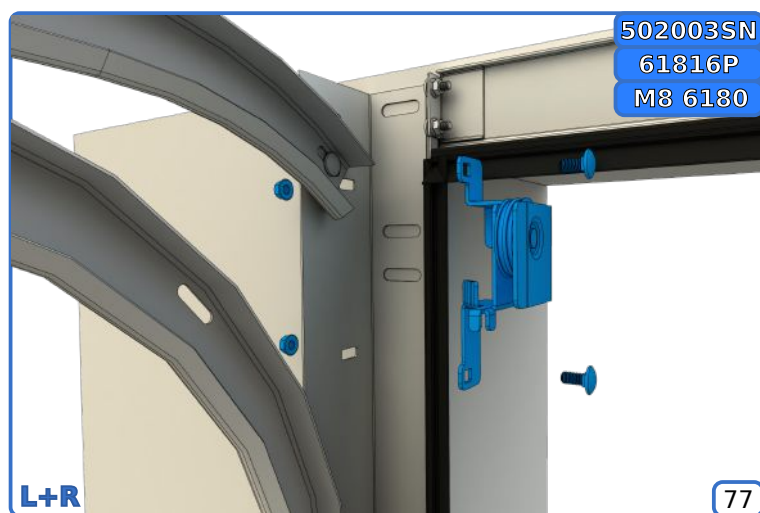



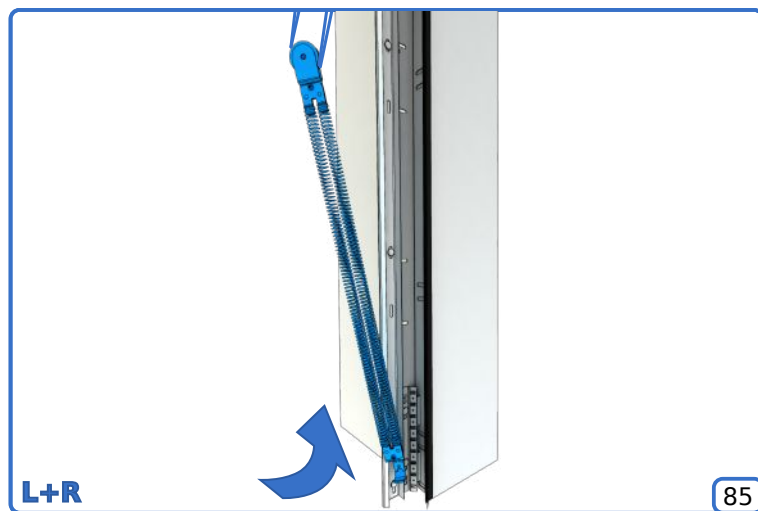
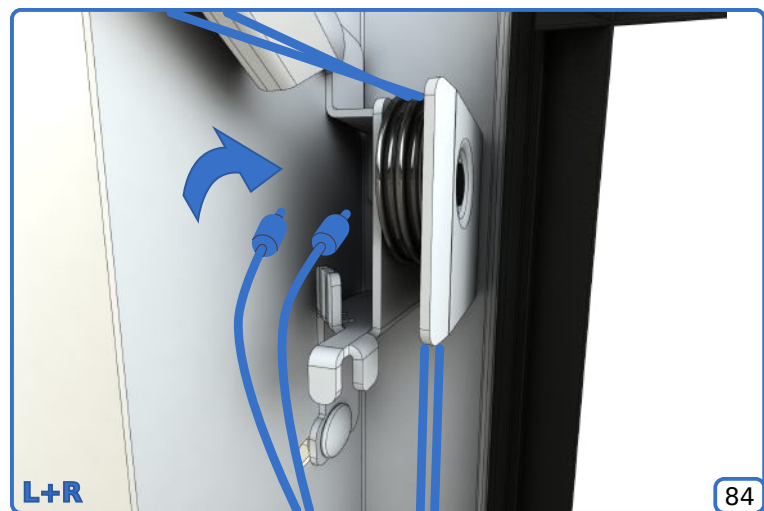
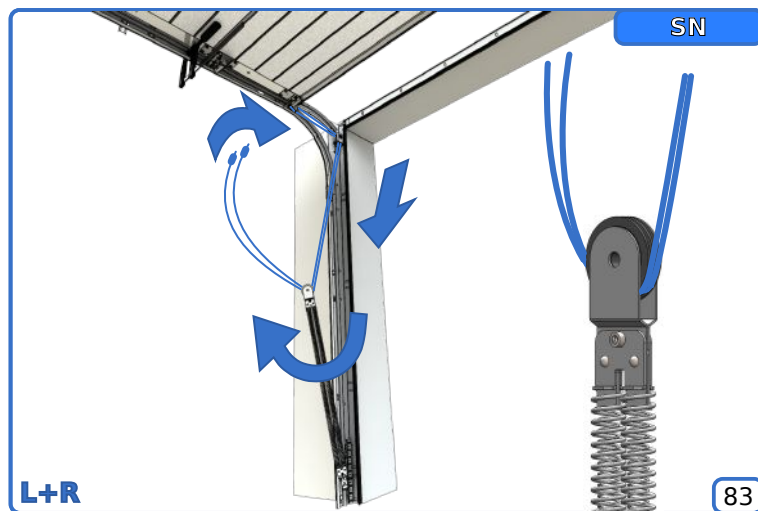
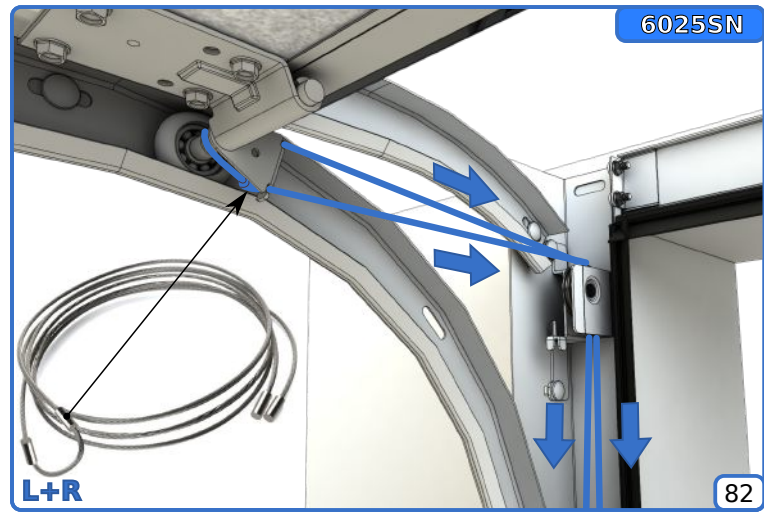


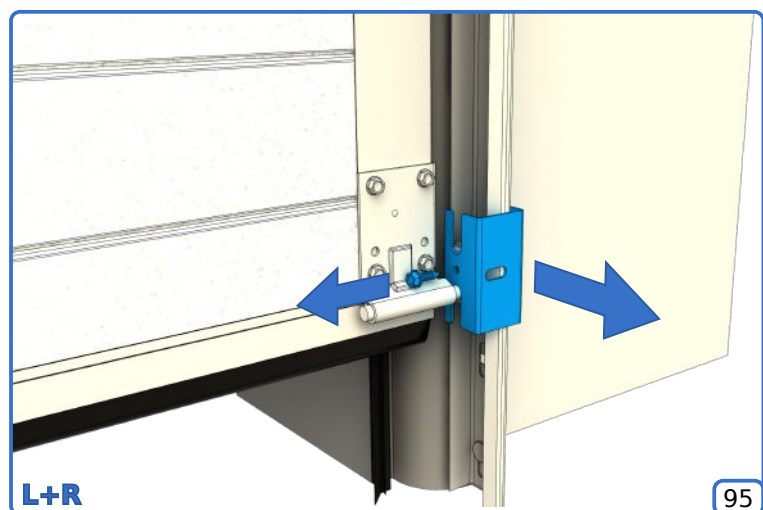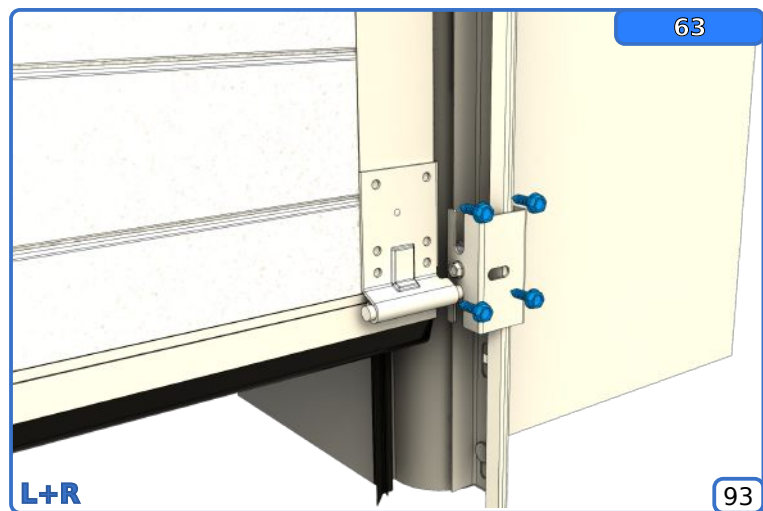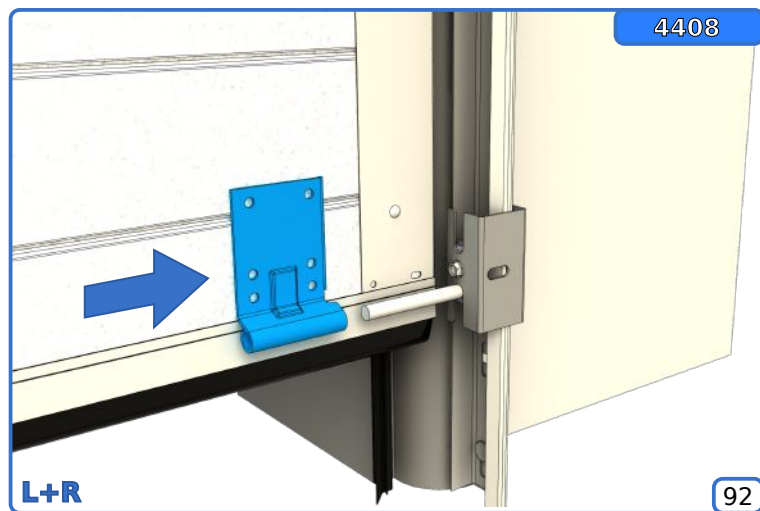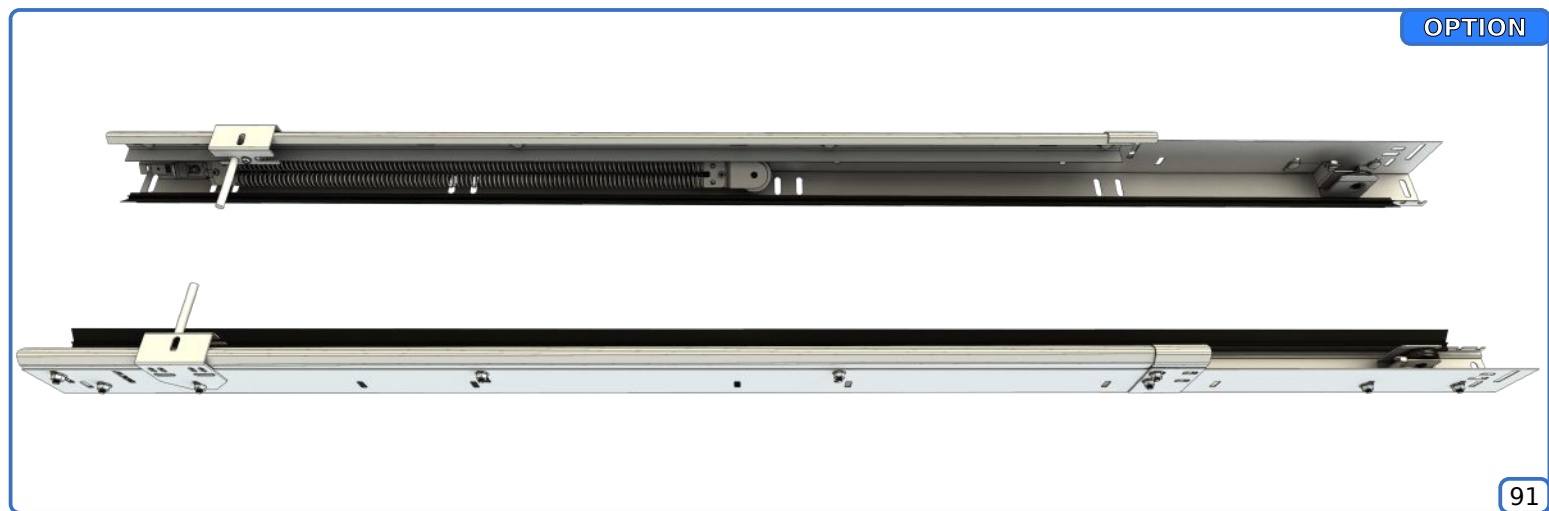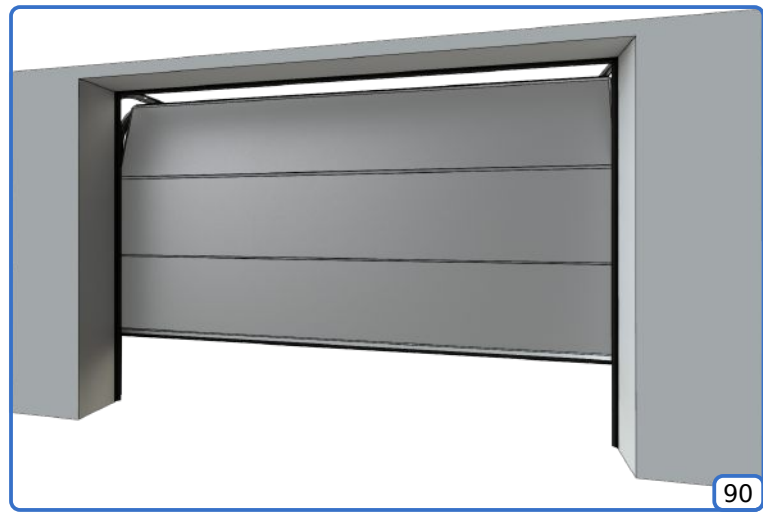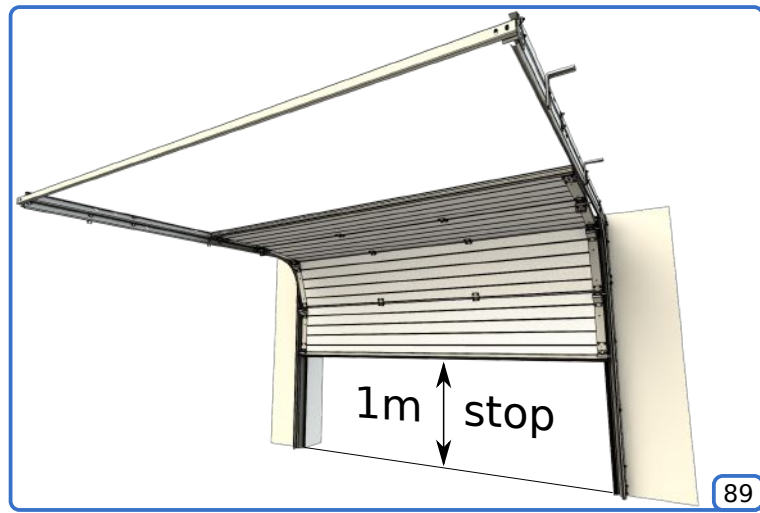

PANELS

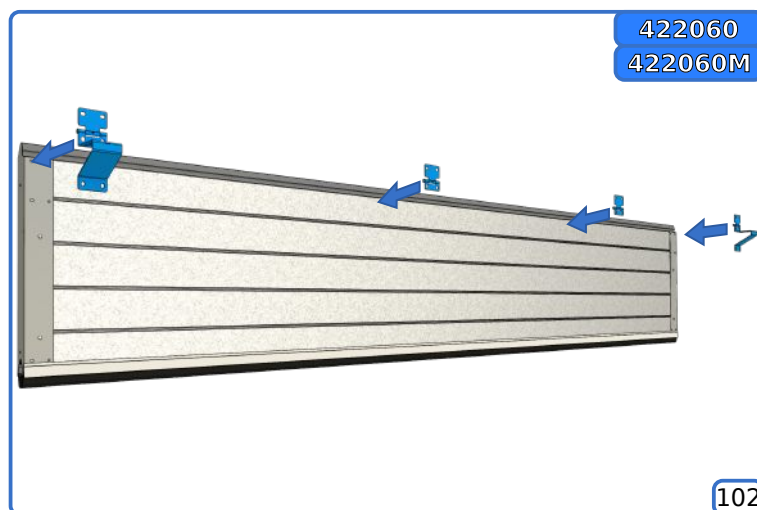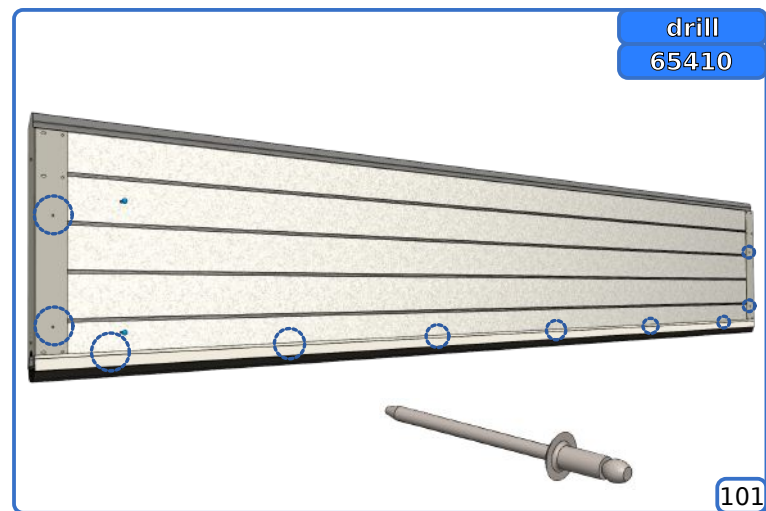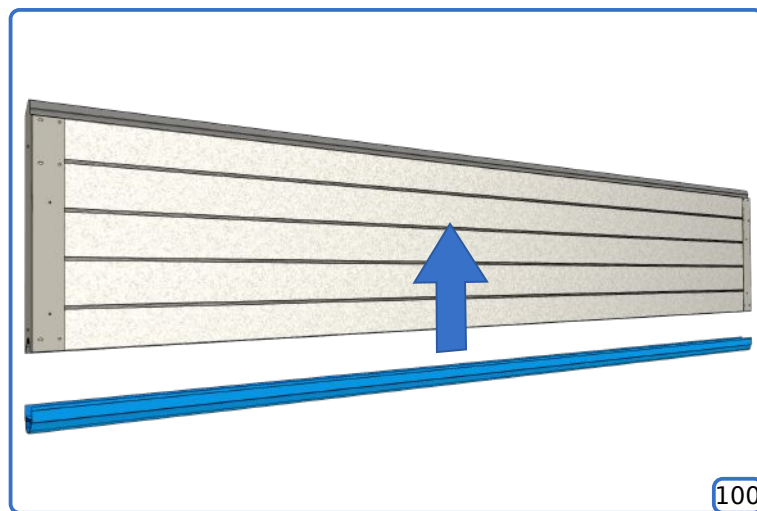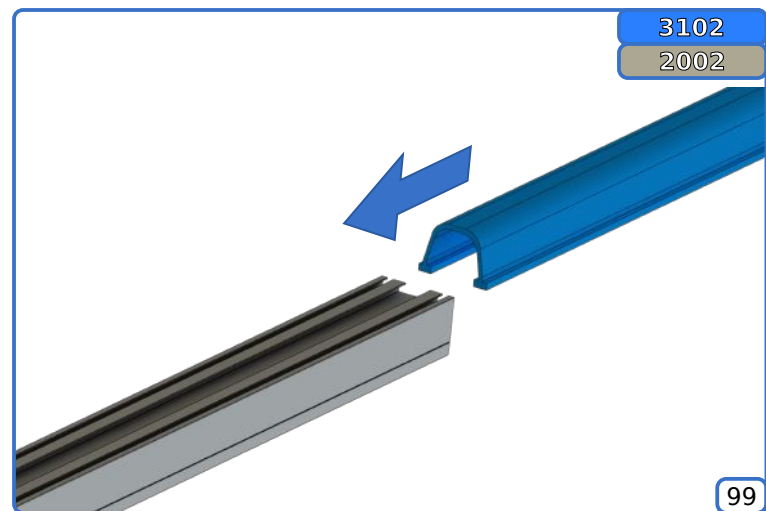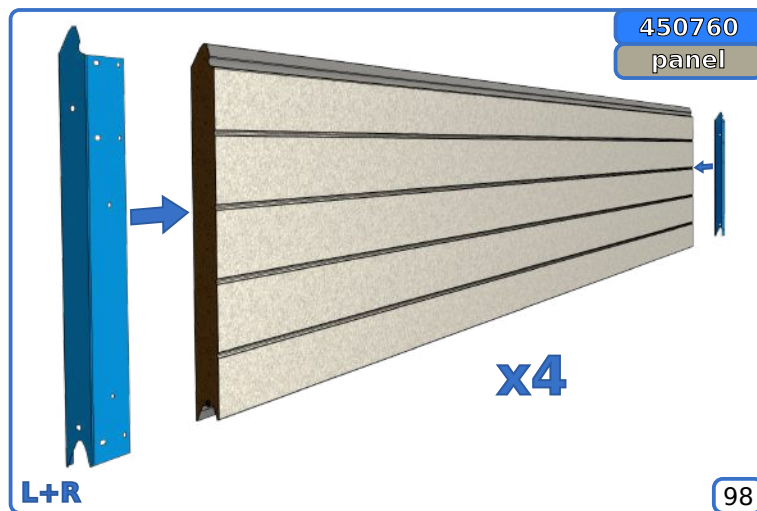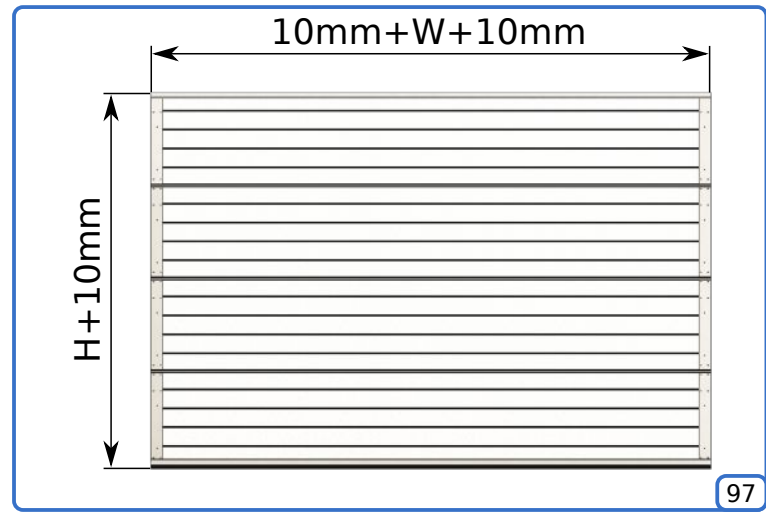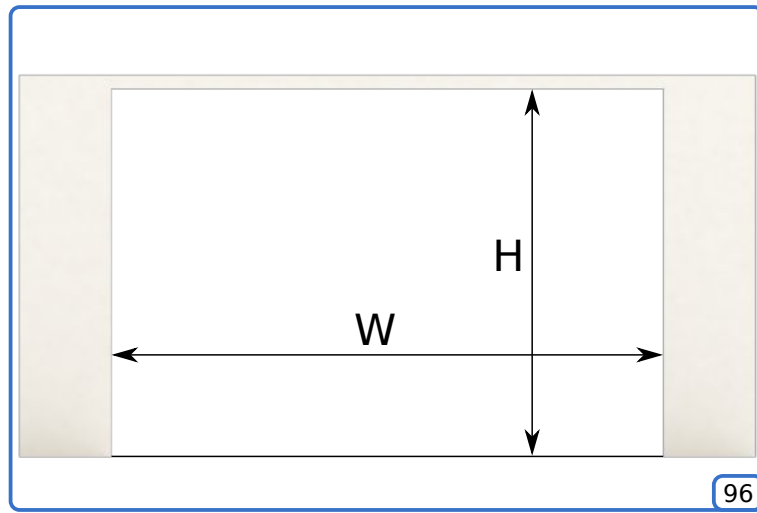

PANELS

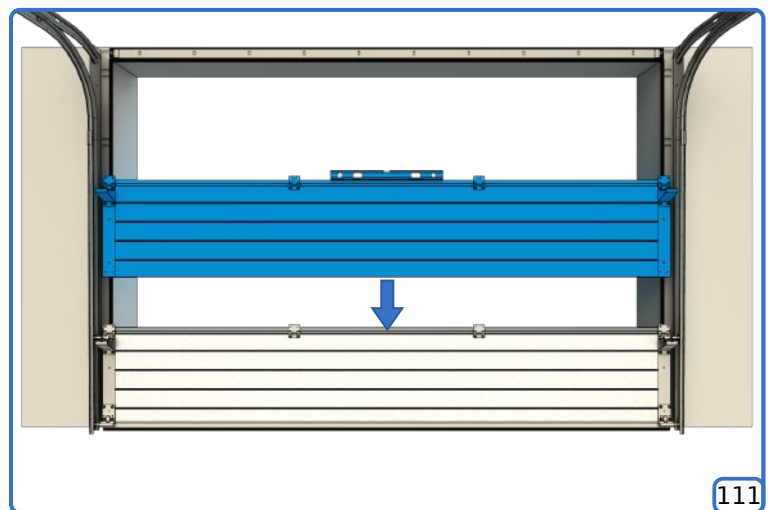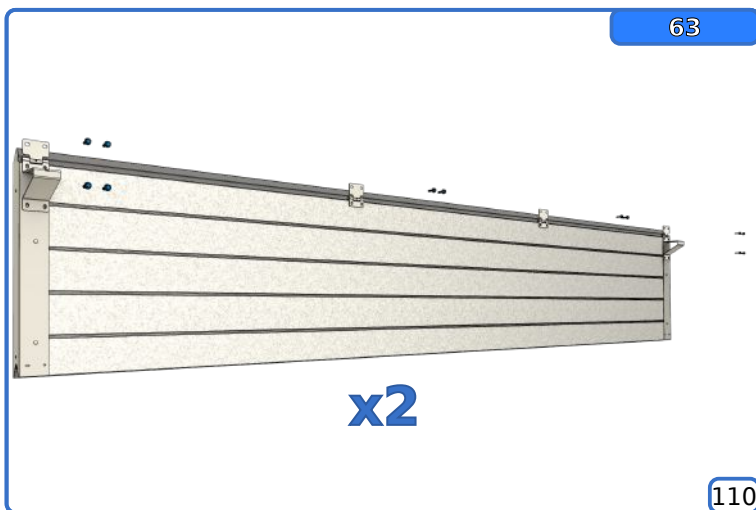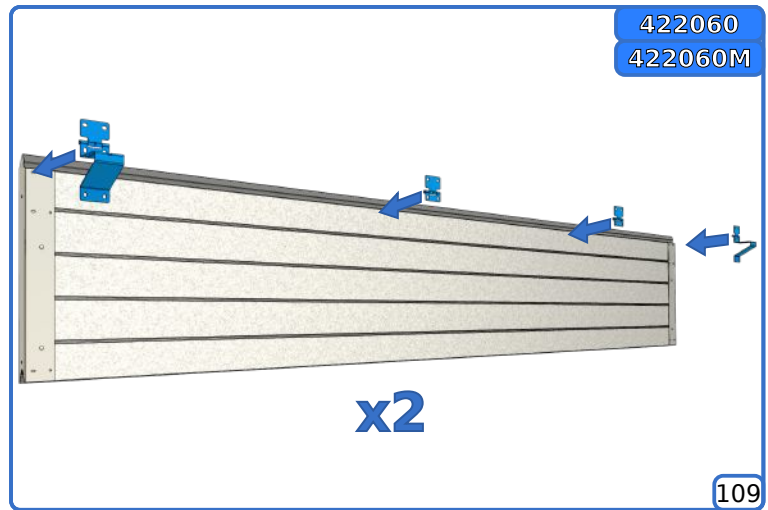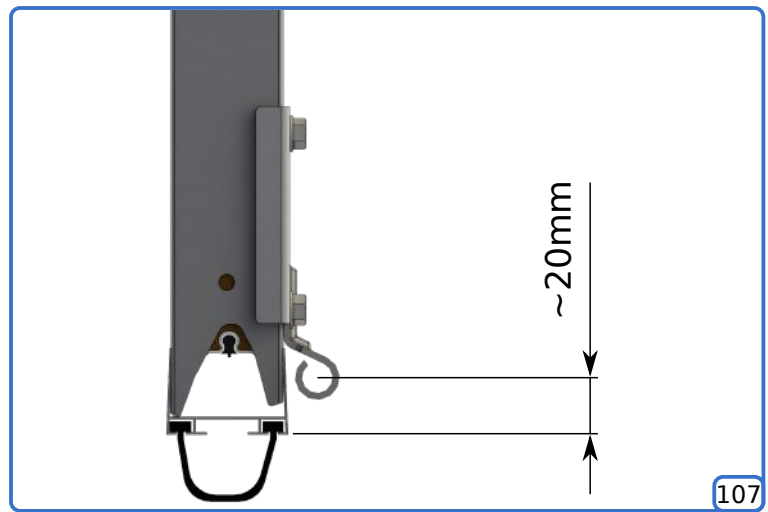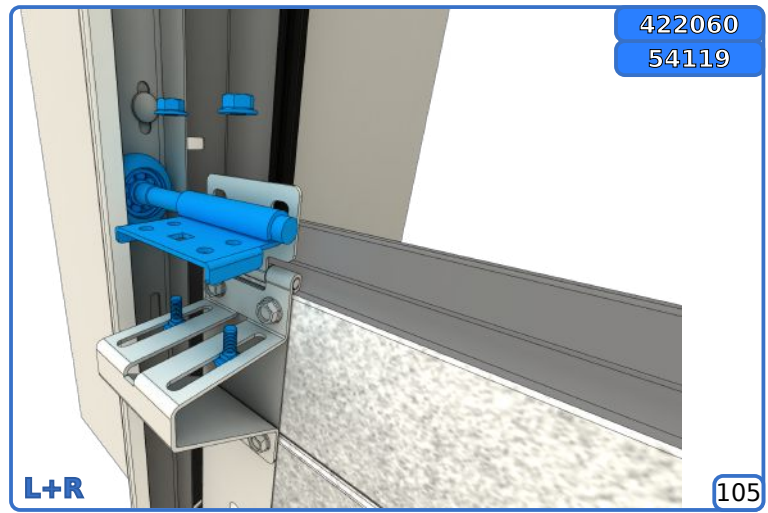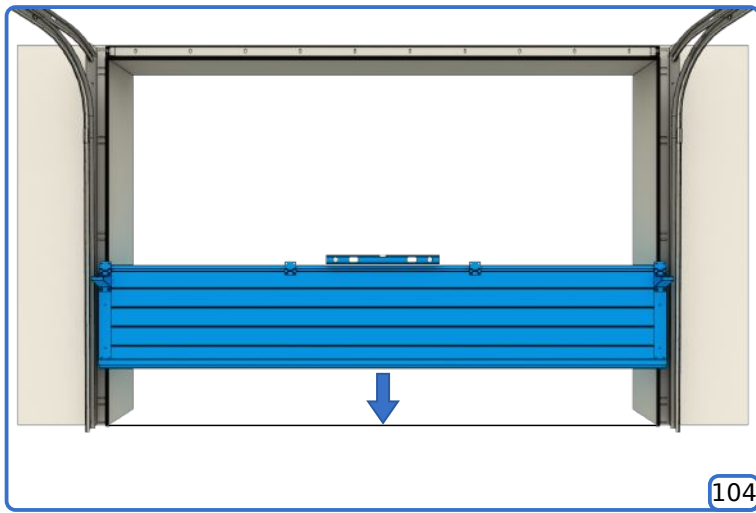

PANELS

